


Creative Playthings®

MODEL AJ100-104 ASSEMBLY MANUAL

SKYBOX TENT

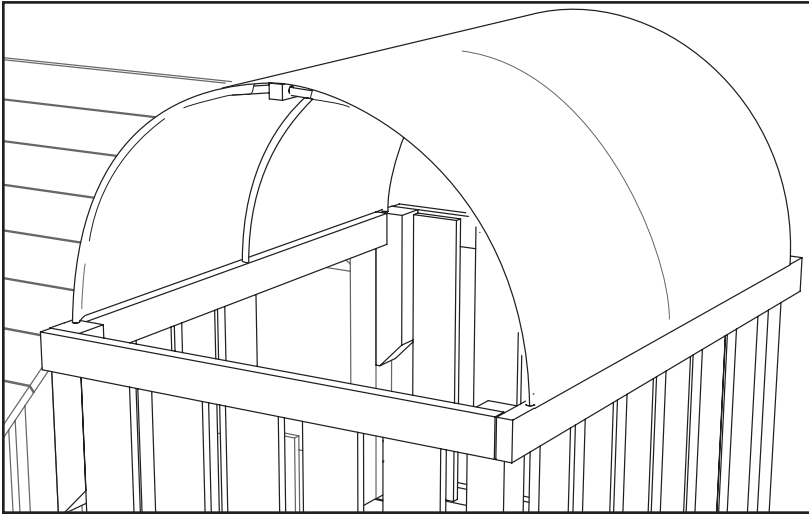

ASSEMBLY

STEP 1 – Drill Mounting Holes:

A 21/32" diameter drill bit is required to install your Skybox Tent. Use the Tent Beam to mark the hole locations prior to drilling. Mark the top center of the Top End Rails of your Skybox. Align the center hole of the Tent beam with the top center mark. Mark the location of the other two holes in the Tent Beam on the Top End Rails (or on top of the Posts, if that's where they land). Drill 21/32" diameter holes 1" deep at each of the six marks.

Important Note: If the Gym comes with a Center Tent Post that interferes with the installation of the Skybox Tent, install a Center Block in the position shown at bottom right. Choose the Center Block with the color that matches your set. Align the center hole of the Tent Beam to the hole in the Center Block before marking the position of the other holes. The Center Block is not necessary in all installations.

 
STEP 2 – Tent Assembly:

Each Tent Hoop is made up of two steel arcs, one male arc and one female. Each arc has a short section at one end that is straight. The curved end of the male arc fits into the curved end of the female arc. Push the two halves of a Tent Hoop curved end first through the pockets formed by the hem along one side of the Tent. Push the ends of the halves of the Tent Hoop out through the slits near the center of the Tent. The ends should fit together through the hole in one end of the Tent Beam. Repeat with another Tent Hoop in the hem on the other side of the Tent. Fit the last Tent Hoop through the hole in the center of the Tent Beam.

STEP 3 – Tent Placement:

Insert the ends of the Tent Poles into the holes drilled earlier in one Top End Rail. Make sure the hem side of the Tent is facing down. Insert the other ends of the Tent Poles into the other Top End Rail. Make any final adjustments to the Tent to center it, and tie it to the Top End Rails with the Tent Cords provided.

PARTS



- 1 36342-101 Tent Beam - 2 x 2 x 53-3/4"



- 1 32497-403 Center Block, Red - 2 x 4 x 11-1/2"
1 32497-102 Center Block, Brn - 2 x 4 x 11-1/2"
3 50435-400 Skybox Tent Hoop 3 Pack
1 40197-400 Tent - 52-1/2" x 83"
6 18000-024 Tent Cord - 1/8" x 24"
4 17020-109 Screw - #8 x 2-1/2"

