
Tire Swing Installation Model AG944-100

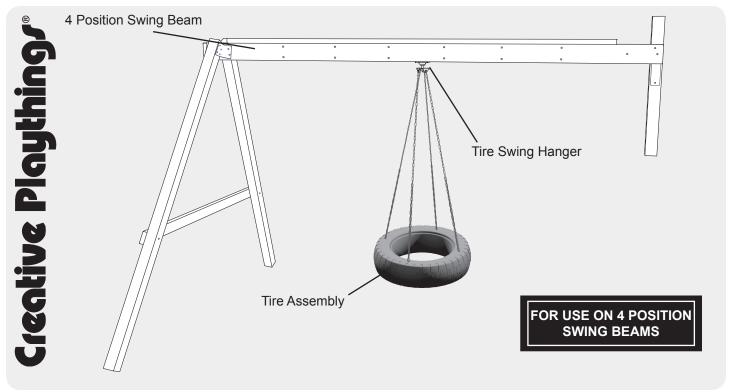



All hardware on this set is specially coated for corrosion resistance. If non-Creative Playthings hardware is used, it must be galvanized or stainless steel.

In order to avoid potential accidents, caution children to use this accessory only in its intended manner. A child should **never** wrap the rope or chain around any part of their body.

STEP ONE - Assemble Tire Swing:

Insert the Eye Bolt from each Chain Assembly through a 3/8" Flat Washer and into the holes on the top of the Tire. Attach using 3/8 x 1-1/2" Fender Washers and 3/8" Lock Nuts in the bottom recesses of the tire. Tighten all hardware.

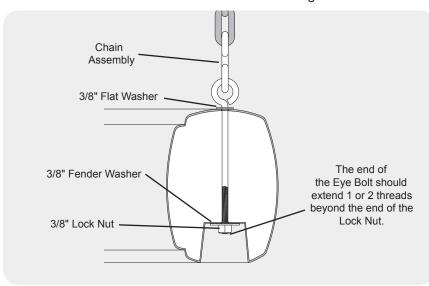


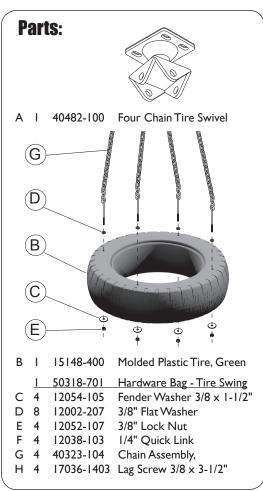


ASSEMBLY INSTRUCTIONS

STEP TWO - Mount Tire Swivel:

Before attaching your Tire Swing assembly to the 4 Position Swing Beam, remove all existing swings and hangers. Measure and mark the center point of your 4 Position Swing Beam, it should be approximately 50" from your play-set.

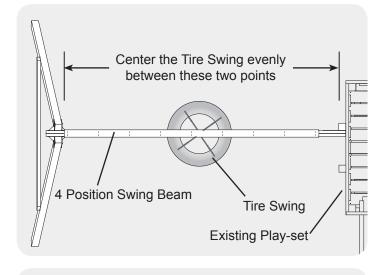


Hold the Swing Hanger in place against the bottom of the Swing Beam. Use a a pencil to mark the position of the four holes in the base of the Swing Hanger. Drill four pilot holes at the marks, as close to the center of each rail of the Swing Beam as possible. The pilot holes should be 1/4" in diameter and 3-1/4" deep. Attach the Tire Swing Hanger (A) to the Swing Beam using four $3/8 \times 3-1/2$ " Lag Screws and four 3/8" Flat Washers. A ratchet wrench with a 9/16" socket is appropriate to tighten the Lag Screws.

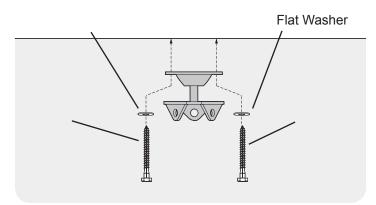

STEP THREE - Hang the Tire Swing:

Open the I/4" Quick-Links at the end of each chain. Install each of the links through the four holes in the Swing Hanger (A). Use awrench to securely tighten the Quick-Links.

NOTE: the Tire Swing height can be adjusted by moving the Quick Link to another link on the chain.

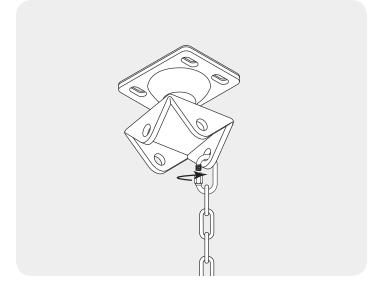

CAUTION: It is extremely important that you perform a monthly inspection of all swing type activities. The components MUST be checked for wear and to make sure all of the hardware is tight. The Tire Swing Hanger is also equipped with a grease fitting and should be lubricated periodically.