 



Chalkboard Pack

Model:
AS974-500

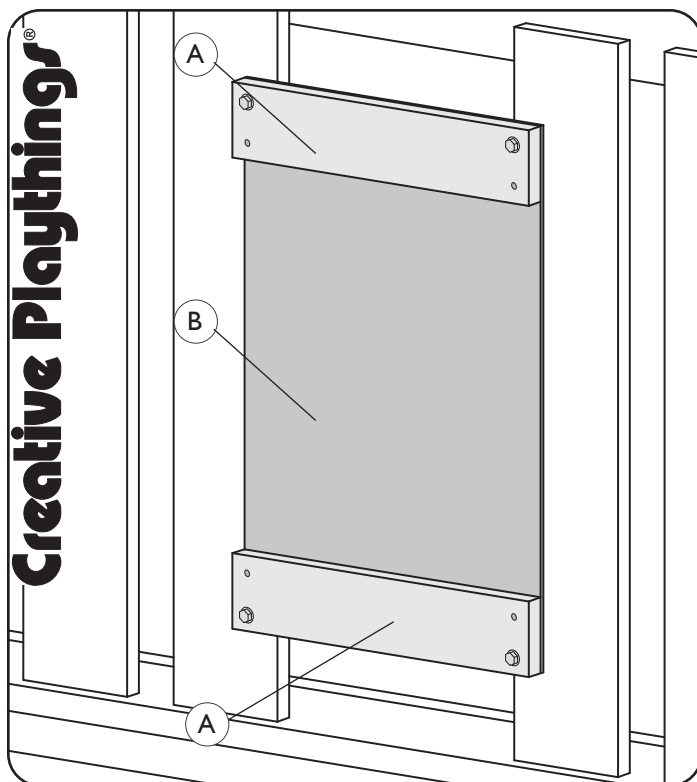

All hardware on this set is specially coated for corrosion resistance. If non-Creative Playthings hardware is used, it must be galvanized or stainless steel.

 Parts:

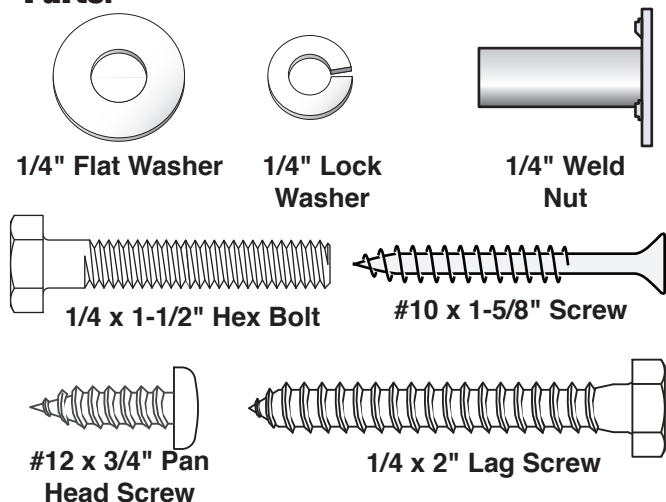

A	2	35257-102	Chalkboard Batten 5/4 x 4 x 15"
B	1	15173-500	Chalkboard 15 x 23"
50553-700			Chalkboard Hardware
4	17020-115	Screw #10 x 1-5/8"	
2	17128-305	Pan Head Screw #12 x 3/4"	
4	17001-104	Weldnut 1/4"	
4	12002-205	Flat Washer 1/4"	
4	12017-205	Lock Washer 1/4"	
4	17003-609	Hex Bolt 1/4 x 1-1/2"	
4	17036-801	Lag Screw 1/4 x 2"	

STEP ONE - Rearrange Wall Slats

The Chalkboard accessory mounts between two Wall Slats. Remove the Wall Slats in the position where the Chalkboard is to be mounted. Refasten two Wall Slats no more than 12" apart using the original fasteners.

Mount other Wall Slats to block off any other opening created when making room for the Chalkboard. **Make sure that there are no gaps between Wall Slats or Posts greater than 3-1/2"** unless the gap is greater than 9".

STEP TWO - Mount Chalkboard

Hold the Chalkboard (B) in place against the Wall Slats. Make sure the gaps above and below are less than 3-1/2". Mark the location of the four larger holes. Drill 5/16" diameter holes through the Wall Slats at the marks.

Fasten the top Chalkboard batten and the Chalkboard to the Wall Slats using two 1/4 x 1-1/2" Hex Bolts, Lock Washers, Flat Washers and Weld Nuts. Use 1-5/8" Screws through the smaller holes. Repeat with the bottom Chalkboard Batten as shown.

Use two Pan Head Screws to secure the Chalkboard to the Battens from behind, through the holes provided.

