Creative Playthings

CHILDHOOD STARTS

EASTCP1 Eastbridge Classic Pack 1

Cartons for this Play Set:

- 1 63085-641 Northbridge Box 1 (Hardware)
 - 63085-652 Northbridge Box 2
 - 63085-603 Northbridge Box 3
 - 63085-654 Northbridge Tent (Instructions)
 - 63045-505 Tire Swing (Hardware)
 - 8364-400 Scoop Slide 10ft.

1

1

1

1

2

- 63061-202 Swing Beam 3 Pos Premium Pine
- 63059-212 Swing Beam Legs 7ft. (Hdwre & Inst.)
- 31820-102 Swing Mount
- AA934-204 2 Swings, 1 Ring Trapeze
- 50574-700 Slide Bolt Bag (taped to slide)
- AJ957-400 Deluxe Hand Grips (Hdwre & Inst.)

Dimensions of assembled package: 11' 5" wide x 22' 0" deep x 10' 5" tall

The components of this gym can be combined with others to create different play sets. This is the best order of assembly to create this specific set.

Read this sheet and all instructions included with the different parts before assembly.


See the Instructions and Owner's Manual included in carton 63085-654 for important safety information.

- The instructions found in 63085-654 give a complete description for assembling all features of the play tower with the following exceptions:
- On step 26, use the added Deluxe Hand Grips instead of the included small yellow hand grips. Use the hand grip hardware included in the main package.
- On step 29, the Swing Beam used will be different than that shown in the manual. The Swing Mount is packed separately from the Swing Beam.

Support using two 5/16 x 4-1/2" Hex Bolt Assemblies as shown at right.

- Switch to the instructions included with the Swing Beam Legs (63059-212). Install the Swing Beam.
- Once the beam is installed, continue assembling the tower.
- Please note the Eastbridge comes with a Scoop Slide rather than the slide shown in step 37. Installation is the same. Two additional slide bolts are taped to the slide.
- Find the center of the Main Beam on the back of the tower. Mark the Main Beam 3" from the center of the Beam and 3-1/4" be-
- low the top edge of the Beam. Drill a 3/8" diameter hole through the Main Beam at the mark.
- Hold the Swing Mount against the Back of the Main Beam and End Tent Support. The counter-bored holes in the Swing Mount should face the gym. Align the hole near the bottom with the newly drilled hole in the Main Beam. Use a level to make sure the Swing Mount is plumb.

Mark the position of the upper hole on the End Tent Support. Drill a 3/8" diameter hole through the board at the mark. Fasten the Swing Mount to the Main Beam and End Tent

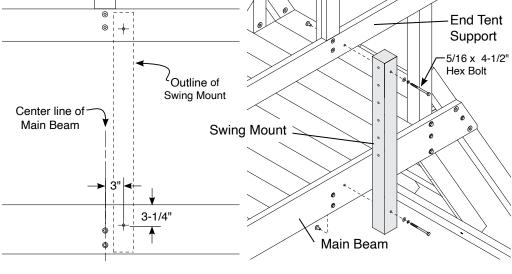

EASTBRIDGE CLASSIC PACK 1

EASTCP1-100 Rev B (12-23)

• Upon completion check to assure all fasteners are secure.