

The components of this gym can be combined with others to create different play sets. This is the best order of assembly to create this specific set.

Read this sheet and all instructions included with the different parts before assembly.

See the Instructions and Owner's Manual included in carton 63069-601 for important safety information.



Dimensions of assembled package:  
14' 11" wide x 27' 0" deep x 12' 9" tall

#### Cartons for this Play Set:

1	63069-601	Manchester Box 1 (Instr & Hdwre)
1	63069-602	Manchester Box 2
1	63069-603	Manchester Box 3
1	63069-604	Manchester Box 4
1	63069-605	Manchester Box 5
1	63069-606	Manchester Box 6 (Hardware)
1	63069-707	Manchester Box 7
2	15168-400	Rocket Slide 12ft.
1	50398-700	Slide Pack
1	63058-202	4 Position Swing Beam
1	63076-303	9ft Beam Legs (Instr & Hdwre)
1	50546-777	3 Swings, 1 Trapeze

- Assemble the Manchester tower as shown in the instructions in Manchester Box 1 (63069-601).
- Note on step 46. For proper fit within the play zone found in the Creative Playthings play zone book, install the swing mount to the corner post by the rung ladder.
- Install the swing beam using instructions from 63076-303.
- Double-check all fasteners are secure and all recessed hardware is covered by hole caps.
- Install the second slide using the Slide Mount and hardware from 50398-700 Slide Pack. The instructions included are for an alternate slide.