



Dimensions of assembled package:
16' 4" wide x 27' 0" deep x 12' 9" tall

The components of this gym can be combined with others to create different play sets. This is the best order of assembly to create this specific set.

Read this sheet and all instructions included with the different parts before assembly.

See the Instructions and Owner's Manual included in carton 63069-601 for important safety information.

Cartons for this Play Set:

1	63069-601	Manchester Box 1 (Instr & Hdwre)
1	63069-602	Manchester Box 2
1	63069-603	Manchester Box 3
1	63069-604	Manchester Box 4
1	63069-605	Manchester Box 5
1	63069-606	Manchester Box 6 (Hardware)
1	63069-707	Manchester Box 7
1	15168-400	Rocket Slide 12ft.
1	63058-202	4 Position Swing Beam
1	63076-303	9ft Beam Legs (Instr & Hdwre)
1	50546-777	3 Swings, 1 Trapeze
1	63070-301	Manch. Fun Deck 1 (Instr & Hdwre)
1	63070-302	Manchester Fun Deck 2
1	63053-404	Manchester Fun Deck 3
1	SM963-402	Dormer (Instr & Hdwre)
1	SM964-402	Gable Fans (Instr & Hdwre)
1	8400-202	Spiral Slide (Hardware)
1	63056-101	Fun Deck Spiral Mount (Instr & Hdwre)
1	AG943-400	Slide Handle (Instr & Hdwre)
1	AG942-400	Access Handles (Instr & Hdwre)

- Assemble the Manchester tower as shown in the instructions in Manchester Box 1 (63069-601).
- Manchester step 39. Do not install front wall slats.
- Install the Dormer (SM963-402) before the swing beam, slide, or fun deck for better ladder access.
- Tighten all connections on the Manchester then install the Fun Deck using the instructions in 63070-301.
- Fun deck step 16. Do not install the end wall support included with the fun deck. Use the end replacement included with the fun deck spiral mount (63056-101). Installation is described in step 3 of the spiral mount instructions.
- Fun deck step 22. Wait to install the narrow deck board on the side where the spiral slide will mount.
- Fun deck step 23. Wait to install the wall slats on the side where the spiral slide will mount. Set it in place but do not secure it.
- Install the Spiral Slide using the instructions included in 63056-101.
- Spiral mount step 7. Before installing the side supports, secure the narrow deck board omitted in step 22 of the fun deck assembly. If the deck board blocks a hole drilled in spiral step 1, insert 5/16" weld nuts first.



- Spiral mount step 9. Before installing the slide entrance, install the walls slats omitted in step 23 of the fun deck assembly. Make sure all gaps are less than 3-1/2" to prevent a possible head entrapment.
- Complete installation of the Spiral Slide.
- Install the swing beam using instructions from 63076-303 and step 46 in the Manchester manual. For proper fit within the play zone found in the Creative Playthings play zone book, install the swing mount to the corner post by the rung ladder.
- Install the Rocket Slide as shown in the step 31 of the fun deck manual using the method shown in the Manchester instructions.
- Install the Gable Fans (SM964-402).
- Install the Access Handles (AG942-400) on both sides of the steps.
- Mount the Slide Handle (AG943-400) above the slide.
- Double-check all fasteners are secure and all recessed hardware is covered by hole caps.