



Dimensions of assembled package:
21' 5" wide x 27' 0" deep x 12' 10" tall

The components of this gym can be combined with others to create different play sets. This is the best order of assembly to create this specific set.

Read this sheet and all instructions included with the different parts before assembly.

See the Instructions and Owner's Manual included in carton 63069-601 for important safety information.

Cartons for this Play Set:

1	63069-601	Manchester Box 1 (Instr & Hdwre)
1	63069-602	Manchester Box 2
1	63069-603	Manchester Box 3
1	63069-604	Manchester Box 4
1	63069-605	Manchester Box 5
1	63069-606	Manchester Box 6 (Hardware)
1	63069-707	Manchester Box 7
1	15168-400	Rocket Slide 12ft.
1	15140-400	14 Ft Swoosh Slide
1	50398-700	Swoosh Mount Pack (Instr & Hdwre)
1	63058-202	4 Position Swing Beam
1	63076-303	9ft Beam Legs (Instr & Hdwre)
1	50546-777	3 Swings, 1 Trapeze
1	63070-301	Manch. Fun Deck 1 (Instr & Hdwre)
1	63070-302	Manchester Fun Deck 2
1	63053-404	Manchester Fun Deck 3
1	63070-404	Manch Fun Deck Roof (Instr & Hdwre)
1	AP970-104	Bubble Panel (Instr & Hdwre)
2	SM963-402	Dormer (Instr & Hdwre)
2	SM964-402	Gable Fans (Instr & Hdwre)
2	AG943-400	Slide Handle (Instr & Hdwre)
1	AG942-400	Access Handles (Instr & Hdwre)

- Assemble the Manchester tower as shown in the instructions in Manchester Box 1 (63069-601).
- Manchester step 39. Do not install front wall slats.
- Assemble both Dormers (SM963-402). Install one Dormer on the main tower roof before the swing beam, slide, or fun deck for better ladder access.
- Tighten all connections on the Manchester then install the Fun Deck using the instructions in 63070-301.
- Fun deck step 14. Instead of installing the corner posts use the corner roof posts from the fun deck roof (63070-404).
- Fun deck step 23. Wait to install the wall slats on the long sides of the fun deck until after the roof is in place.
- Fun deck step 24. Do not install wall slats at the end of the fun deck.
- Install the Fun Deck Wood Roof (63070-404).
- Fun deck wood roof step 8. Install the fun deck wall slats as shown. Leave an opening for the swoosh slide. The slide mount found in the swoosh mount pack (50398-700) can be used to determine the right spacing. Leave off slats at the end of the fun deck for the bubble panel. All gaps should be less than 3-1/2" or more than 9" to prevent potential head entrapment.



- Install the swing beam using instructions from 63076-303 and step 46 in the Manchester manual. For proper fit within the play zone found in the Creative Playthings play zone book, install the swing mount to the corner post near the rung ladder as shown above.
- Install the remaining Dormer (SM963-402) on the fun deck roof before installing the rocket slide for better ladder access.
- Install the Rocket Slide as shown in the step 31 of the fun deck manual using the method shown in the Manchester instructions.
- Install the Gable Fans (SM964-402).
- Install the Bubble Panel (AP970-104) at the end of the fun deck. There are special instructions for installing in this position on page 3 of the bubble panel assembly guide.
- Install the Access Handles (AG942-400) on both sides of the steps.
- Mount one Slide Handle (AG943-400) above the rocket slide and one above the swoosh slide.
- Double-check all fasteners are secure and all recessed hardware is covered by hole caps.