



Dimensions of assembled package:  
19' 0" wide x 26' 1" deep x 12' 10" tall

The components of this gym can be combined with others to create different play sets. This is the best order of assembly to create this specific set.

Read this sheet and all instructions included with the different parts before assembly.

See the Instructions and Owner's Manual included in carton 63069-601 for important safety information.

### Cartons for this Play Set:

- |              |                                       |   |
|--------------|---------------------------------------|---|
| 1 63069-601  | Manchester Box 1 (Instr & Hdwre)      | <ul style="list-style-type: none"> <li>• Assemble the Manchester tower as shown in the instructions in Manchester Box 1 (63069-601).</li> <li>• Manchester step 39. Wait to install the wall slats.</li> <li>• Assemble both Dormers (SM963-402). Install one dormer on the main tower roof before the swing beam, slide, or fun deck for better ladder access.</li> <li>• Tighten all connections on the Manchester then install the Fun Deck using the instructions in 63070-301.</li> <li>• Fun deck step 14. Instead of installing the corner posts use the corner roof posts from the fun deck roof (63070-404).</li> <li>• Fun deck step 16. Do not install the end wall support included with the fun deck. Use the end replacement included with the fun deck spiral mount (63056-101). Installation is described in step 3 of the spiral mount instructions.</li> <li>• Fun deck step 22. Wait to install the narrow deck board on the side where the spiral slide will mount. Set it in place but do not secure it.</li> <li>• Fun deck step 23. Wait to install the wall slats on the long sides of the fun deck until after the slides and roof are in place.</li> <li>• Fun deck step 24. Do not install wall slats at the end of the fun deck.</li> <li>• Install the spiral slide mount using the instructions included in 63056-101.</li> </ul> |
| 1 63069-602  | Manchester Box 2                      |   |
| 1 63069-603  | Manchester Box 3                      |   |
| 1 63069-604  | Manchester Box 4                      |   |
| 1 63069-605  | Manchester Box 5                      |   |
| 1 63069-606  | Manchester Box 6 (Hardware)           |   |
| 1 63069-707  | Manchester Box 7                      |   |
| 1 SH304-101Q | Pinnacle Rock Climbing Wall           |   |
| 1 8400-202   | Spiral Slide (Hardware)               |   |
| 1 63056-101  | Fun Deck Spiral Mount (Instr & Hdwre) |   |
| 1 15140-400  | 14 Ft Swoosh Slide                    |   |
| 1 50398-700  | Swoosh Mount Pack (Instr & Hdwre)     |   |
| 1 63058-202  | 4 Position Swing Beam                 |   |
| 1 63076-303  | 9ft Beam Legs (Instr & Hdwre)         |   |
| 1 50546-777  | 3 Swings, 1 Trapeze                   |   |
| 1 63070-301  | Manch. Fun Deck 1 (Instr & Hdwre)     |   |
| 1 63070-302  | Manchester Fun Deck 2                 |   |
| 1 63053-404  | Manchester Fun Deck 3                 |   |
| 1 63070-404  | Manch Fun Deck Roof (Instr & Hdwre)   |   |
| 1 AP970-104  | Bubble Panel (Instr & Hdwre)          |   |
| 1 AS974-500  | Chalkboard Panel (Instr & Hdwre)      |   |
| 1 50514-100  | Tic Tac Toe (Instr & Hdwre)           |   |
| 2 SM963-402  | Dormer (Instr & Hdwre)                |   |
| 2 SM964-402  | Gable Fans (Instr & Hdwre)            |   |
| 1 AG943-400  | Slide Handle (Instr & Hdwre)          |   |
| 1 AG942-400  | Access Handles (Instr & Hdwre)        |   |



- Spiral mount step 4. Do not install the cross brace.
- Spiral mount step 7. Before installing the side supports, screw down the narrow deck board omitted in step 22 of the fun deck assembly. If the deck board blocks a hole drilled in spiral step 1, insert 5/16" weld nuts first.
- Spiral mount step 9. Stop here before installing the slide entrance. First install the roof to stabilize the fun deck.
- Install the Fun Deck Wood Roof (63070-404).
- Fun deck wood roof step 8. Wait to install the wall slats until after the slides and climber are installed.
- When the roof is complete resume installation of the spiral slide at step 9.
- Install the swing beam using instructions from 63076-303 and step 46 in the Manchester manual. For proper fit within the play zone found in the Creative Playthings play zone book, install the swing mount to the corner post near the rung ladder as shown above.
- Install the remaining Dormer (SM963-402) on the fun deck roof before installing the swoosh slide and pinnacle climber for better ladder access.
- Assemble the Pinnacle Rock Climber (SH304-101Q) and lean it into place. Set the Swoosh Slide (15140-400) next to it. Check the spacing.
- Complete installation of the pinnacle climber.
- Install the swoosh slide.
- Install wall slats on the fun deck in the arrangement shown. Gaps must be smaller than 3-1/2" or larger than 9" to prevent possible head entrapment.
- Install four wall slats across the opening on the front of the main tower. All gaps must be smaller than 3-1/2" to prevent possible head entrapment.
- Install Tic Tac Toe (50514-100), Chalkboard (AS974-500), and associated wall slats across the back of the main tower in the arrangement shown. Gaps must be smaller than 3-1/2" to prevent potential head entrapment.
- Install the Gable Fans (SM964-402).
- Install the Bubble Panel (AP970-104) at the end of the fun deck. There are special instructions for installing in this position on page 3 of the bubble panel assembly guide. Check the fit before cutting to size.
- Install the Access Handles (AG942-400) on both sides of the steps.
- Mount the Slide Handle (AG943-400) above the swoosh slide.
- Double-check all fasteners are secure and all recessed hardware is covered by hole caps.