

Dimensions of assembled package:
14' 6" wide x 12' 6" deep x 8' 10" tall



The components of this gym can be combined with others to create different play sets. This is the best order of assembly to create this specific set.

Read this sheet and all instructions included with the different parts before assembly.

See the Instructions and Owner's Manual included in carton 60083-341 for important safety information.

Cartons for this Play Set:

1	60083-341	Eastport (1 of 3) (Hdwre & Inst.)
1	60083-342	Eastport (2 of 3)
1	60083-343	Eastport (3 of 3)
1	8515-202	8' Wave Slide
1	60081-102	Playtime Swing Beam (Hdwre & Inst.)
1	AA934-204	2 Swings, 1 Ring Trapeze
1	AE914-412	Steering Wheel (Hdwre & Inst.)
1	AA935-302	Telephone (Hdwre & Inst.)
1	AE915-304	Telescope (Hdwre & Inst.)
1	AA911-50541	Glider & Econ. Brackets (Hdwre & Inst.)



- The instructions found in 60083-341 give a complete description for assembling the play tower.
- After step 30 switch to the instructions included with the Swing Beam (63080-101) and Glider Economy Brackets (AA911-50541).
- Install the Glider Brackets on the Swing Beam. Do not install Swing Hangers below the Glider Brackets.
- Assemble the Swing Beam and mount it to the tower.
- After installing the beam and securing the ground stakes, check to assure all fasteners are secure.
- Install the Steering Wheel (AE914-412), Telephone (AA935-302), and Telescope (AE915-304) in the desired positions. Make sure none of them are placed in line with the exit of the slide or in line with the swings.
- Hang the swing, trapeze, and glider.