



The components of this gym can be combined with others to create different play sets. This is the best order of assembly to create this specific set.

Read this sheet and all instructions included with the different parts before assembly. See the Instructions and Owner's Manual included in carton 63062-222 for important safety information.

Dimensions of assembled package:
18' 9" wide x 16' 6" deep x 11' 6" tall

Cartons for this Play Set:

1	63062-211	Yorktown 1 (Hardware)	2	8364-400	10 ft Scoop Slide
1	63062-222	Yorktown 2 (Instructions)	1	50398-700	Slide Pack
1	63007-421	Lexington Gym 1 (Hardware)	1	63058-202	4 Position Swing Beam
1	63007-422	Lexington Gym 2	1	63076-303	9 ft Beam Legs (Hdwre & Instr)
1	63062-301	Yorktown Wood Roof (Hardware)	1	SD204-102Q	Lexington Picnic Table
1	SH946-102	Access Ladder 5ft.	1	63093-102	Picnic Adapter
1	SM963-402	Dormer Brown (Hdwre & Instr)	1	63079-102	Monkey Bars
1	SM964-402	Gable Fans (Hdwre & Instr)	1	50546-777	3 Swings, 1 Trapeze
2	40456-402	End Panel Assembly	2	AG943-400	Slide Handles
1	40459-402	Double Window Panel	1	AG942-400	Access Ladder Handles, pair
1	40460-402	Door, Window Panel (Hdwre & Instr)			

- Start by assembling the Yorktown tower. Instructions are in carton 63062-222. Other instructions and hardware are in the cartons noted at above.
- Yorktown step 19. The 9ft Beam will be mounted in the position pictured above, parallel to the roof. Drill the holes. Insert the weld nuts.
- Yorktown step 33. Wait to install the wall slats.
- Install the swing beam. Instructions are in carton 63076-303.
- Set the ladder and slides as shown above. Check spacing.
- Secure the access ladder using the method shown in step 35 of the Yorktown instructions.
- Fasten Access Ladder Handles (AG942-400) to the ladder.
- Install Monkey Bars (63079-102) on the front of the tower. Mount one side directly to the post.
- Install two slide mounts and slides using the method shown in steps 36 and 37 of the Yorktown instructions and the extra slide mounts and hardware from the Slide Pack (50398-700).
- Mount a Slide Handle (AG943-400) above each Slide.
- Install the wall slats in the positions shown above, using the methods from the Yorktown instructions. Gaps must be narrower than 3-1/2" or wider than 9" to prevent potential head entrapment.
- Mount the hand grips to the entrance wall slats.
- Review the instructions for the Picnic Table (SD204-102Q) and Picnic Adapter (63093-102). Install the picnic table using the adapter to create a gap for access to the side closest to the swings. The standard installation leaves the gap under the porch but it can be installed with the gap at the back of the tower.
- Double-check all fasteners are secure and all recessed hardware is covered by hole caps.