Creative Playthings

CHILDHOOD STARTS

YORK9WPP4 YORKTOWN PREMIUM PACK 4



Cartons for this Play Set

Oditoris for this ridy Set.					
1	63062-211	Yorktown 1 (Hardware)	1	40460-402	Door & Window Panel (Hdwre & Instr)
1	63062-222	Yorktown 2 (Instructions)	1	63058-202	4 Position Swing Beam
1	63007-421	Lexington Gym 1 (Hardware)	1	63076-303	9 ft Beam Legs (Hdwre & Instr)
1	63007-422	Lexington Gym 2	1	50546-777	3 Swings, 1 Trapeze
1	63062-301	Yorktown Wood Roof (Hardware)	1	8364-400	10 ft Scoop Slide
1	SH946-102	Access Ladder 5ft.	1	SC909-800Q	Lexington Play Walls (Hdwre & Instr)
1	SM963-402	Dormer Brown (Hdwre & Instr)	1	SC910-800Q	Lexington Play Floor (Hdwre & Instr)
1	SM964-402	Gable Fans (Hdwre & Instr)	1	SH304-101Q	Pinnacle Climber (Hdwre & Instr)
2	40456-402	End Panel Assembly	1	AG943-400	Slide Handle (Hdwre & Instr)
1	40459-402	Double Window Panel	1	AG942-400	Access Handles (Hdwre & Instr)

- Start by assembling the Yorktown tower. Instructions are in carton 63062-222. Other instructions and hardware are in the cartons noted at left.
- · Yorktown step 19. The 9ft Beam will be mounted in the position pictured above, parallel to the roof. Drill holes. Insert • Install the Pinnacle Climbing Wall (SH304-101Q) in the poweld nuts.
- · Yorktown step 33. Install the Wall Slats, Access Ladder, . and Slide in the positions shown above.
- · Mount the Access Handles (AG942-400) to the ladder.

- Install the 9ft Swing Beam. Instructions are in 63076-303.
- Install the Play Floor (SC910-800Q).
- · Install the Play Walls (SC909-800Q) across the back and sides of the main tower as shown.
- sition shown.
- Install the Slide Handle (AG943-400) above the slide.
- · Double-check all fasteners are secure and all recessed hardware is covered by hole caps.

YORKTOWN PREMIUM PACK 4