Creative Plaything/®

CHILDHOOD STARTS HERE

YORK9WPP6 Yorktown Premium Pack 6



The components of this gym can be combined with others to create different play sets. This is the best order of assembly to create this specific set. Read this sheet and all instructions included with the different parts before assembly. See the Instructions and Owner's Manual included in carton 63062-222 for important safety information.

Cartons for this Play Set:

- 63062-211 Yorktown 1 (Hardware) 1 Yorktown 2 (Instructions) 63062-222 1 1 63007-421 Lexington Gym 1 (Hardware) Lexington Gym 2 1 63007-422 Yorktown Wood Roof (Hardware) 63062-301 1 SH946-102 Access Ladder 5ft. 1 SM963-402 Dormer Brown (Hdwre & Instr) 1 Gable Fans (Hdwre & Instr) 1 SM964-402 40456-402 End Panel Assembly 4 40459-402 **Double Window Panel** 2 40460-402 Door & Window Panel (Hdwre & Instr) 2 10 ft. Super Wave Slide 15166-400 1 63058-202 4 Position Swing Beam 1 63076-303 9ft Swing Beam Legs (Hdwre & Instr) 1 50546-777 3 Swings, 1 Trapeze 1 AH201-102Q Rock Climbing Wall (Hdwre & Instr) 1 Lexington Play Floor (Hdwre & Instr) SC910-800Q 1 Yorktown Play Walls (Hdwre & Instr) 63064-101 1 Yorktown Play Floor (Hdwre & Instr) 63063-101 1 AG942-400 Access Ladder Handles (Hdwre & Instr) 1 AG943-400 Slide Handle (Hdwre & Instr) 1 63073-101 Clubhouse Window Pk (Hdwre & Instr) 1
- Start by assembling the Yorktown tower. Instructions are in carton 63062-222. Other instructions and hardware are in the cartons noted at left.
- Yorktown step 2. Do not install the Sandbox Center on the front of the tower. Use the Floor Transition from the Yorktown Play Floor (63063-101). See page 2 of the Yorktown Play Floor instructions. Secure the Sandbox backs but wait to install the floors.
- Yorktown step 12. Omit the angle braces. They interfere with the bottom clubhouse panels.
- Yorktown step 14. Omit the stringer flanges. They interfere with the bottom clubhouse panels.
- Yorktown step 19. The 9ft Beam will be mounted in the position pictured above. Parallel to the roof.
- Wait to install the Access Ladder, Slide, and Wall Slats until after the rest of the play set is complete.
- · Yorktown step 32. Omit the safety rail.
- Install the 9ft Swing Beam. Instructions are in carton 63076-303.

YORKTOWN PREMIUM PACK 6



- Install the Yorktown porch play floor (63063-101) followed by the Lex play floor (SC910-800Q). Install the cleats and stringers for both before installing the deck boards.
- Install the lower clubhouse panels as shown in the instructions included with the Door & Window Panel (40460-402).
- Install the Yorktown Porch Play Walls (63064-101).
- Install the Rock Wall (AH201-102Q) in the position shown. It may help to position the brackets on the inside of the uprights.
- Install the slide mount and slide using the method shown in steps 36 and 37 of the Yorktown instructions.
- Secure the access ladder in the position shown using the method shown in step 35 of the Yorktown instructions.
- Fasten Access Ladder Handles (AG942-400) to the ladder.
- Install the slide mount and slide using the method shown in steps 36 and 37 of the Yorktown instructions.

- Install wall slats in the positions shown using methods from the Yorktown instructions. Gaps must be narrower than 3-1/2" or wider than 9" to prevent potential head entrapment.
- Mount one hand grip to each entrance wall slat.
- Mount the Slide Handle (AG943-400) above the Super Wave Slide.
- Install the shutters and flower box from the Clubhouse Window Pack (63073-101). Mount the shutters on the upper end wall panel as shown above. Mount the flower box in the position shown on the first page of this guide.
- Double-check all fasteners are secure and all recessed hardware is covered by hole caps.

YORKTOWN PREMIUM PACK 6