## Creative Plaything/®

CHILDHOOD STARTS

## YORKFSWPP

## YORKTOWN PREMIUM PACK CLUBHOUSE



The components of this gym can be combined with others to create different play sets. This is the best order of assembly to create this specific set.

Read this sheet and all instructions included with the different parts before assembly. See the Instructions and Owner's Manual included in carton 63062-222 for important safety information.

## **Cartons for this Play Set:**

1 63062-211

•	00002 211	ronkown i (narawaro)
1	63062-222	Yorktown 2 (Instructions)
1	63007-421	Lexington Gym 1 (Hardware)
1	63007-422	Lexington Gym 2
1	63062-301	Yorktown Wood Roof (Hardware)
1	SH946-102	Access Ladder 5ft.
1	SM963-402	Dormer Brown (Hdwre & Instr)
1	SM964-402	Gable Fans (Hdwre & Instr)
2	40456-402	End Panel Assembly
1	40459-402	Double Window Panel
1	40460-402	Door & Window Panel (Hdwre & Instr)
1	8364-400	10ft. Scoop Slide
1	SC909-800Q	Lexington Play Walls (Hdwre & Instr)
1	SC910-800Q	Lexington Play Floor (Hdwre & Instr)
1	63064-101	Yorktown Play Walls (Hdwre & Instr)
1	63063-101	Yorktown Play Floor (Hdwre & Instr)
1	SH304-101Q	Pinnacle Climber (Hdwre & Instr)
1	63081-102	Ice Cream Stand (Hdwre & Instr)
1	63090-222	Chain Climber Frame (Hdwre & Instr)
1	63089-606	Chain Cargo Net
1	AG942-400	Access Ladder Handles (Hdwre & Instr)

Slide Handle (Hdwre & Instr)

Chin-up bar (Hdwre & Instr)


Yorktown 1 (Hardware)

- Start by assembling the Yorktown tower. Instructions are in carton 63067-222. Other instructions and hardware are in the cartons noted at left.
- Wait to install the Access Ladder, Slide, and Wall Slats until after the rest of the play set is complete. The window guard is not needed.
- Yorktown step 12. Do not install the angle brace where the blackboard from the ice cream stand will mount.
- Install the Porch Play Floor (63063-101) and the Lexington Play Floor (SC910-800Q). When installing the cleats for the Lex play floor, install the cleats for the Porch Play Floor (63063-101) as noted on step 2 of the porch floor instructions. Use the 3" bolts included with the porch play floor for the purpose.
- Install the Ice Cream Stand (63081-102) in the position shown above.
- Install the Play Walls (SC909-800Q) across the back and along the side of the main tower opposite the ice cream stand.
- Install the Porch Play Walls (63064-101) across the front and along the side of the main tower, as shown above.
- Mount the Pinnacle Rock Wall (SH304-101Q) to the side of the upper porch near the clubhouse door.

YORKTOWN PREMIUM PACK CLUBHOUSE

AG943-400

AA918-603

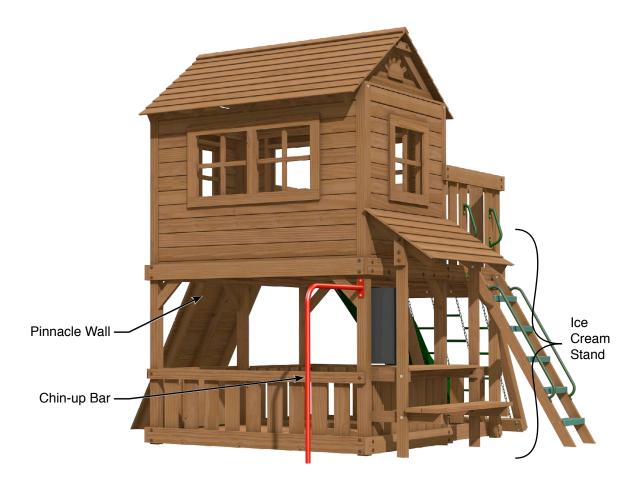

- Secure the Access Ladder (SH946-102) to the side of the porch near the ice cream stand using the method shown in step 35 of the Yorktown instructions. Make sure users will not encounter the roof of the ice cream stand when climbing stairs.
- Fasten the Access Ladder Handles (AG942-400) to the Access Ladder.
- Set the slide in place to determine spacing needed for the chain climber.
- Assemble and mount the Chain Climber using the instructions from 63090-222.
- Install the slide mount and slide using the method shown in steps 36 and 37 of the Yorktown instructions.
- Mount the Slide Handle (AG943-400) above the slide.
- Install the wall slats to the main tower in the postions shown in the images in this installation guide using the methods from the Yorktown instructions. Gaps must be narrower than 3-1/2" or wider than 9" to prevent potential head entrapment.
- Mount one hand grip to the each entrance wall slat on each side of the ladder.
- Mount the Chin-up Bar (AA918-603) to the back post of the main tower.
- Double-check all fasteners are secure and all recessed hardware is covered by hole caps.