
## **Creative Plaything**

CHILDHOOD STARTS HERE

## **RIDG9WPP7 RIDGEFIELD PREMIUM PACK 7**





## Cartons for this Play Set:

- 63062-211 Ridgefield 1 (Hardware) 1 Ridgefield 2 (Instructions) 1 63067-202 Read this sheet and all instructions included with the different parts before Williamsburg Box 1 (Hardware) 63006-421 1 63006-422 Williamsburg Box 2 1 Williamsburg Box 3 63006-423 Williamsburg Roof (Hardware) 63006-445 End Panel Assembly Side Window Panel Door Panel (Hdwre & Instr) Gable Fans (Hdwre & Instr) SM964-402 SM963-402 Dormer (Hdwre & Instr) 1 SH946-102 Access Ladder 5ft. AG942-400 Access Ladder Handles (Hdwre & Instr) 1 15166-400 10 ft. Super Wave Slide 1 4 Position Swing Beam 63058-202 63076-303 9ft Beam Legs (Hdwre & Instr) 1 50546-777 3 Swings, 1 Trapeze 1 63081-102 Ice Cream Stand (Hdwre & Instr) 1 63073-101 Clubhouse Window Pk (Hdwre & Instr) 1 63079-102 Monkey Bars (Hdwre & Instr) 1 SC908-800Q Wmsbg Play Floor (Hdwre & Instr) 1 Ridgefield Play Walls (Hdwre & Instr) 63071-101 1 Ridgefield Play Floor (Hdwre & Instr) 1 63072-101 AG943-400 Slide Handle (Hdwre & Instr) 1 AA917-603 Fireman's Pole (Hdwre & Instr)
  - assembly. See the Instructions and Owner's Manual included in carton 63067-202 for important safety information.
    - · Start by assembling the Ridgefield tower. Instructions are in carton 63067-202. Other instructions and hardware are in the cartons noted at left. Do not use the Williamsburg instructions packed in the wood roof carton.

The components of this gym can be combined with others to create different

play sets. This is the best order of assembly to create this specific set.


- · Ridgefield step 2. Do not install the Sandbox Center on the front of the tower. Use the Floor Transition from the Ridgefield Play Floor (63072-101). See page 2 of the Ridgefield Play Floor instructions. Secure the Sandbox backs but wait to install the floors.
- Ridgefield step 12. Install only the angle braces under the porch. The other braces will interfere with the bottom clubhouse panels.
- · Ridgefield step 18. The 9ft Beam will be mounted in the position pictured above; parallel to the roof.
- · Ridgefield step 32. Do not install safety rails.
- · Install the 9ft Swing Beam. Instructions are in 63076-303.
- · Wait to install the Access Ladder, Slide, and Wall Slats until after the rest of the play set is complete.

**RIDGEFIELD PREMIUM PACK 7** 

- 1 1 3 40456-402 2 40457-402 2 40458-402 1 1 1
- © Copyright 2018, Creative Playthings

1

RIDG9WPP7-100 Rev B (06-20)

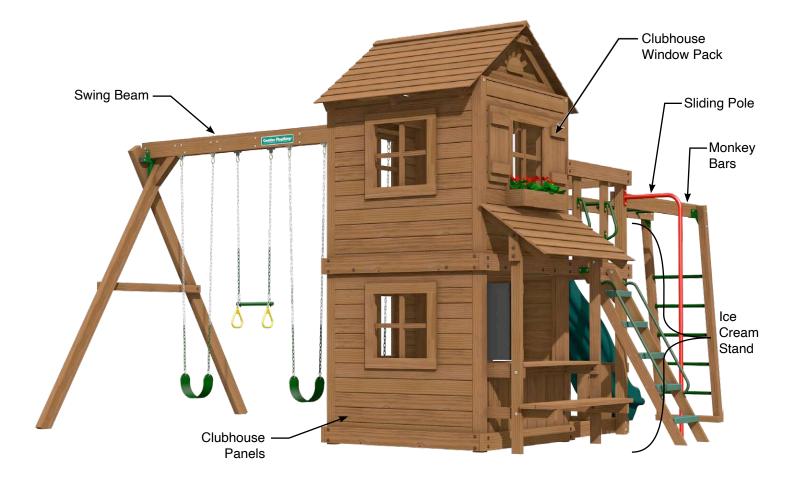

- · Complete installation of the Ridgefield porch play floor · Install the Fireman's Pole (AA917-603) in the position (63072-101) followed by the Williamsburg play floor (SC908-800Q).
- · Install the lower clubhouse panels as shown in the instructions included with the door panel (40458-402). Do not install an end panel in the position the Ice Cream stand is to be installed.
- Install the 9ft Swing Beam. Instructions are in 63076-303.
- Install the shutters from the Clubhouse Window Pack (63073-101) on the window panel above where the ice cream stand will mount. Do not install the flower box until after the position of the ice cream stand roof is determined.
- Install the Ice Cream Stand (63081-102) in the postion shown.
- Install the flower box from the Clubhouse Window Pack (63073-101) on the window panel above the ice cream stand roof.
- Install the Ridgefield porch play walls (63071-101).
- Install Monkey Bars (63079-102) on the front of the tower. Mount one side directly to the post.

- shown above.
- · Lean the Access Ladder (SH946-102) in the position shown. Make sure the ladder is clear of the overhang of the ice cream stand roof. Secure the access ladder using the method shown in step 36 of the Ridgefield instructions.
- · Fasten the Access Ladder Handles (AG942-400) to the Access Ladder.
- Install the slide mount and slide using the method shown in steps 38 and 39 of the Ridgefield instructions.
- · Mount the Slide Handle (AG943-400) above the Super Wave Slide.
- · Install the wall slats in the positions shown on the front page, using the methods from the Ridgefield instructions. Gaps must be narrower than 3-1/2" or wider than 9" to prevent potential head entrapment. Leave a space to access the fireman's pole.
- Mount hand grips to the entrance wall slats.
- · Double-check all fasteners are secure and all recessed hardware is covered by hole caps.

## **RIDGEFIELD PREMIUM PACK 7**