

Dimensions of assembled package:  
38' 3" wide x 28' 6" deep x 12' 9" tall



Yorktown Tower

Ridgefield Tower

The components of this gym can be combined with others to create different play sets. This is the best order of assembly to create this specific set.

Read this sheet and all instructions included with the different parts before assembly.

See the Instructions and Owner's Manual included in carton 63062-222 for important safety information.

### Cartons for this Play Set:

2 63062-211	Yorktown/Ridgefield 1 (Hardware)
1 63062-222	Yorktown 2 (Instructions)
1 63062-301	Yorktown Wood Roof (Hardware)
1 63007-421	Lexington Gym 1 (Hardware)
1 63007-422	Lexington Gym 2
1 63067-202	Ridgefield 2 (Instructions)
1 63006-421	Williamsburg Box 1 (Hardware)
1 63006-422	Williamsburg Box 2
1 63006-423	Williamsburg Box 3
1 63006-445	Williamsburg Roof (Hdwre & Instr)
2 63008-221	Skybox 1 (Hdwre & Instr)
2 63008-222	Skybox 2
2 SJ926-810	Skybox Wood Roof (Hdwre & Instr)
1 63060-222	9ft Swing Beam Legs (Hdwre & Instr)
1 63058-202	4 Position Swing Beam
1 50546-777	3 Swings, 1 Trapeze
4 SM963-402	Dormer (Hdwre & Instr)
4 SM964-402	Gable Fans (Hdwre & Instr)
1 SJ951-102	Bridge (Hdwre & Instr)
1 SH946-102	Access Ladder, 5ft
1 SH304-101Q	Pinnacle Rock Wall (Hdwre & Instr)
1 SC910-800Q	Lexington Play Floor (Hdwre & Instr)
1 SC908-800Q	Williamsburg Play Floor (Hdwre & Instr)
2 SC904-800Q	Skybox Play Floor (Hdwre & Instr)
1 SC903-800Q	Skybox Play Walls (Hdwre & Instr)
3 AP970-104	Bubble Panel (Hdwre & Instr)
3 AG943-400	Slide Handle (Hdwre & Instr)
2 AG942-400	Access Ladder Handles (Hdwre & Instr)
2 8400-202	Spiral Slide, Green (Hardware)

1 63081-102	Ice Cream Stand (Hdwre & Instr)
1 63079-102	Monkey Bars (Hdwre & Instr)
3 63073-101	Clubhouse Window Pk (Hdwre & Instr)
1 63072-101	Ridgefield Play Floor (Hdwre & Instr)
1 63071-101	Ridgefield Play Walls (Hdwre & Instr)
1 63064-101	Yorktown Play Walls (Hdwre & Instr)
1 63063-101	Yorktown Play Floor (Hdwre & Instr)
1 63045-505	Tire Swing (Hardware)
1 50571-100	Bridge Tire Swing Adapt (Hdwre & Instr)
2 63033-102	Spiral Mount (Hdwre & Instr)
1 50514-100	Tic Tac Toe (Hdwre & Instr)
1 50398-700	Skybox Slide Kit (Hdwre & Instr)
2 40460-402	Door & Window Panel (Hardware)
2 40459-402	Double Window Panel
1 40458-402	Side Door Panel (Hdwre & Instr)
2 40457-402	Side Window Panel
4 40456-402	End Window Panel
2 15166-400	10 ft. Super Wave Slide
1 15140-400	14ft Rocket Slide & Foot
2 63066-101	Yorktown Skybox Panel

- Start by assembling the Yorktown tower. Instructions and hardware are in the cartons noted at left. Use the instructions in 63062-222.
- Wait to install Access Ladders, Slides, and Wall Slats until after the entire play set is complete.
- York step 2. Do not install the Sandbox End on the end adjacent to the Skybox. Use the Floor Transition from the Skybox Play Floor(SC904-800Q). See page 3 of the Skybox Play Floor instructions.



Yorktown Tower


- York step 2. Do not install the Sandbox Center on the front of the tower. Use the Floor Transition from the Yorktown Play Floor (63063-101). See page 2 of the Yorktown Porch Play Floor instructions.
  - York step 3. Install the Porch Sandbox Ends as shown on step 3 and 4 of the Yorktown Play Floor instructions. See the illustration on page 3 of this guide to see how the base structure of this tower will be.
  - York step 12. Due to the lower clubhouse panels that will be installed later, the Angle Braces on the back of the gym are not needed. The Angle Braces on the side **opposite** the Sky box will not be needed.
  - York step 14. Do not install the stringer flanges.
  - York step 19. Install the 9ft Beam in the position shown above. Instructions and hardware are in the 9' Swing Beam Leg Carton (63060-222). Continue with Yorktown assembly.
  - York step 24. Do not install the End Window Panel where the skybox will mount.
  - York steps 28, 29, 30, 31. Do not install on the end where the Skybox will mount.
  - Skip York step 32. Safety Rails are not needed.
  - Proceed with the Skybox tower.
  - Skybox step 2. Omit the sandbox end under the gym. The floor transition from the Skybox Play Floor should be used.
  - Skybox step 11. Use the front posts from The Skybox Roof (SJ926-810) in place of the post extensions.
  - Skybox Step 17. Wait to install the wall slats until after installing the bubble and slides.
  - Ignore the special instructions regarding mounting with play floors in the Skybox instructions. Use the method found on the bottom of page three of the skybox play floor instructions titled "Install the Skybox Play Floor adjacent to a gym with a play floor."
  - Once the basic Yorktown-Skybox tower is assembled as-
- semble the Ridgefield tower about 92" away from the Yorktown. The center of the porch will align with the center of the Yorktown Porch.
- Wait to install the Access Ladder, Slide, and Wall Slats until after the whole play set is complete.
  - Ridge step 2. Do not install the Sandbox End on the end adjacent to the Skybox. Use the Floor Transition from the Skybox Play Floor (SC904-800Q). See page 3 of the Skybox Play Floor instructions.
  - Ridge step 2. Do not install the Sandbox Center on the front of the tower. Use the Floor Transition from the Ridgefield Play Floor (63072-101). See page 2 of the Ridgefield Play Floor instructions.
  - Ridge step 3. Install the Porch Sandbox Ends as shown on step 3 and 4 of the Ridgefield Play Floor instructions.
  - Ridge step 12. Before securing the angle braces, move the tower into place 92" from the other tower. Use the bridge rails from SJ951-102 to assure the alignment is exact. Continue assembly making sure the posts are plumb and the towers are level. Due to the lower clubhouse panels that will be installed later, the Angle Braces on the back





of the gym are not needed. The Angle Braces on the side **opposite** the Skybox will not be needed.

- Ridge step 17. After installing the Wall Support, mount the Bridge (SJ951-102) between the Yorktown and Ridgefield upper porches.
- Ridge step 24. Do not install the End Window Panel where the skybox will mount.
- Ridge steps 28, 29, 30, 31. Do not install on the end where the Skybox will mount.
- Skip Ridge step 32. Safety Rails are not needed.
- Proceed with the Skybox tower.
- Skybox step 2. Omit the sandbox end under the gym. The floor transition from the Skybox Play Floor should be used.
- Skybox step 11. Use the front posts from The Skybox Roof (SJ926-810) in place of the post extensions.
- Skybox Step 17. Wait to install the wall slats until after installing the bubble, climber, and slide.
- Ignore the special instructions regarding mounting with play floors in the Skybox instructions.
- Install the Yorktown Porch Play Floor (63063-101), Lexington Play Floor (SC910-800Q), and Skybox Play Floor (SC904-800Q) at the base of the Yorktown-Skybox structure. As shown on page 3 of the Skybox Play Floor instructions titled "Install the Skybox Play Floor adjacent to a gym with a play floor." The Lex Play Floor cleats and stringers must be cut to size.

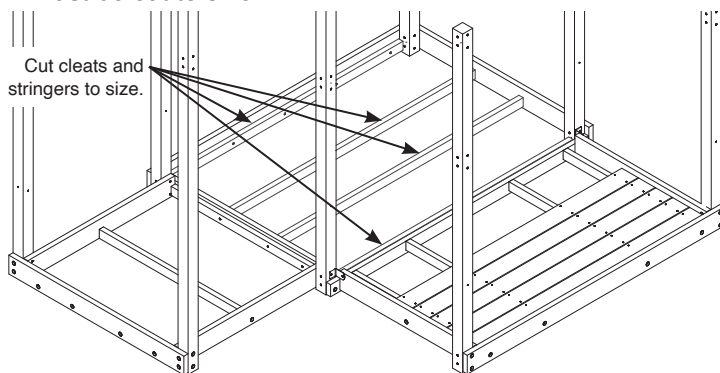

- Install the Ridgefield Porch Play Floor (63072-101), Williamsburg Play Floor (SC908-800Q), and Skybox Play Floor (SC904-800Q) at the base of the Ridgefield-Skybox structure. As shown on page 3 of the Skybox Play Floor instructions, the Wmsbg Play Floor cleats and stringers must be cut to size.
- Mount the Tire Swing (63045-505) to the underside of the Bridge using the Bridge Tire Swing Adapter (50571-100).
- Mount the Tic-Tac-Toe Panel (50514-100) to the Back center of the Bridge.
- Mount the Bubble Panel (AP970-104) to the front center of the Bridge.
- Using a ladder, install the Dormers (SM963-402) in the positions shown on the front page. Ladder access may be obstructed by later installations.
- Assemble two Spiral Slides (8400-202). Mount one to each Skybox using a Spiral Mount (63033-102).

- Install a Yorktown Skybox Panel (63066-101) below the Skybox on both the Yorktown and Ridgefield.
- Install a Gable Fan (SM964-402) at each end of each Skybox roof.
- Install a Door & Window Panel (40460-402), End Window Panel (40456-402), and a Double Window Panel (40459-402) inside the base of the Yorktown tower in the positions shown in this guide.
- Install the Yorktown Play Walls (63064-101) on the bottom porch of the Yorktown Tower, arranged as shown on the first page of this guide.
- Install a Door Panel (40458-402), End Window Panel (40456-402), and a Side Window Panel (40457-402) inside the base of the Ridgefield tower in the positions shown in this guide.
- Install the Ridgefield Play Walls (63071-101) on the bottom porch of the Ridgefield tower, arranged as shown on the first page of this guide. The porch should exit away from the Bridge.
- Mount the Rocket Slide (15140-400) to the front of the Yorktown Skybox using the Skybox Slide Kit (50398-700).
- Mount a Bubble Panel (AP970-104) to the back of each Skybox.
- Assemble the Pinnacle Rock Wall (SH304-101Q) and mount it to the front of the Ridgefield Skybox.
- Install the Ice Cream Stand (63081-102) under the Yorktown Skybox as shown in the image on the first page of the guide. Remove one angle brace to fit the chalkboard.
- Mount Monkey Bars (63079-102), an Access Ladder (SH946-102), and a Super Wave Slide (15166-400) to the front of the Yorktown tower, positioned as shown in this guide.
- Mount an Access Ladder (SH946-102), and a Super Wave Slide (15166-400) to the front of the Ridgefield tower, positioned as shown in this guide.
- Fasten two Access Ladder handles (AG942-400) to each Access Ladder.
- Mount a Slide Handle (AG943-400) above each Super Wave Slide and the Rocket Slide.
- Install Skybox Play Walls (SC903-800Q) at the bottom of the Ridgefield Skybox as seen on page 2 of this guide. Leave an opening at the front.
- Install wall slats in the positions shown on the first and second page, using the methods from the Ridgefield, Skybox, and Yorktown instructions. Gaps must be narrower than 3-1/2" or wider than 9" to prevent potential head entrapment.
- Mount the hand grips to the entrance wall slats.
- Install the Shutters and Flower Box from a Clubhouse Window Packs (63073-101) to the front window of the Yorktown. Install a window pack to each End Window Panel on the upper level, facing each other.
- Double-check all fasteners are secure and all recessed hardware is covered by hole caps.
- Hang the swings.