

All hardware on this set is specially coated for corrosion resistance.

If non-Creative Playthings hardware is used, it must be galvanized or stainless steel.

Carefully read the owner's manual and all instructions before assembling your play set. It provides additional information on the care and use of your play set.

Creative Playthings takes great care to design its products with your child's safety in mind. However, only with careful supervision and proper safety instructions, can you be assured of safe play time on any product designed for children.

This product is intended for single family home/residential use only and not intended for use in any public setting. Placement in any public setting constitutes a misuse of this product.

PLAY SET SAFETY

FOR SAFETY SAKE, PLEASE TAKE TIME TO READ ALL INSTRUCTIONS COMPLETELY AND CAUTION YOUR CHILDREN APPROPRIATELY.

Observing the following statements & warnings reduces the likelihood of serious or fatal injury:

- Children should use equipment only in its intended manner.
- Children should not wear loose or stringed clothing while using playground equipment.
- Children should not play on equipment in wet weather conditions due to potentially slippery surfaces.
- Children should NOT walk too closely in front of, behind, or between moving swings and trapezes.
- Children should NOT swing empty swing seats.
- Children should NOT jump off swings and/or trapeze while they are in motion.
- Children should NOT twist swing chains because this will reduce the strength of the chain and connections.
- Children should sit in the center of the swings with their full weight on the seats.
- Do not allow children under age 7 to use monkey bars unless supported by an adult.
- Children should NOT be on the top surface of the monkey bars or swing beam.
- On-site adult supervision is required at all times for children of all ages.
- Until assembly is complete, DO NOT let your children use the play set.
- Never attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.
- Suspended ropes, chains, and cables must be secured at both ends.
- Suspended ropes, chains, and cables must not be capable of looping back on themselves.
- Do not allow more than 120 lbs. on single occupancy swing accessories such as the Sling Swing and Trapeze.
- Do NOT allow more than 175 lbs. on multiple use swing accessories such as the Back-to-Back Plastic Horse.
- Do NOT allow more children on the play set than can simultaneously use all the swing stations at one time.
- Children should NEVER wear bicycle or other helmets while playing on the play set.
- Dress children with well-fitting and full foot enclosing footwear. Examples of inappropriate footwear are clogs, flip flops, sandals.
- Never add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging element(s).
- Do not allow children to wear inappropriate items, such as but not limited to, loose fitting clothing, hood and neck drawstrings, scarves, cord-connected items, capes and ponchos. These items can cause death by strangulation.

Assembly Safety:

- Keep the work area clean and clear of obstructions.
- Children should stay out of the work area until the safe play area is cleared of obstacles, the play set has been completely assembled, all hardware has been tightened and checked, and all tools have been picked up.
- Keep children off the play set until it has been completely assembled.
- Some parts of the assembly process may require help from another competent adult.
- Do not stand on the platform until the play set has been completely assembled, use a step ladder if you cannot reach high enough.
- Follow the manufacturers' safety recommendations for the tools and equipment you use.
- Avoid assembling your play set in poor weather conditions.
- Wear proper clothing and safety equipment (safety glasses, boots, and gloves) while assembling your play set.

SAFE PLAY AREA

SELECTING THE CORRECT LOCATION FOR YOUR PLAY PRODUCT IS IMPORTANT FOR YOUR CHILDREN'S SAFETY AND THE PRODUCT'S LONGEVITY.

Play Set Dimensions:


- The Williamsburg play set has ground dimensions of 8'-3" x 12'-7" (Swing Accessories not included).
- The Williamsburg play set requires a level ground surface of 21' x 25' for a Safe Play Area (Swing Accessories not included).
- Additional accessories may increase the size of the Safe Play Area.
- The maximum fall height for your Williamsburg is 60". 7ft Swing beam fall height: 84". 9ft beam fall height: 107".

Safe Play Area:

- The Safe Play Area refers to a zone extending 6' beyond the play set on all sides, including the slide and the space above the play set. Because children may deliberately jump from a moving swing, the Safe Play Area must be extended to 14' in front of and behind a swinging Accessory.
- The ground surface must be level. Installing your play set on sloping ground can cause it to lean or "rack". This leaning puts additional stress on all connections and joints and in time will cause those connections to loosen and fail.
- The Safe Play Area must be free of all structures, landscaping, trees and branches, rocks, wires, and other obstacles to safe play. Children can be seriously injured running, or swinging into these obstacles.
- Remove all tripping hazards from the Safe Play Area. Tripping hazards include; roots, stumps, rocks, landscaping, sprinkler heads, railroad ties, plumbing and electrical connections.
- Do not install your play set over concrete, gravel, asphalt, packed earth, or any other hard surface. The following is a list of recommended ground covers from the Consumer Product Safety Commission.
- Any edging used to contain the ground cover must be beyond the Safe Play Area. (i.e.. Landscape Timbers)


RECOMMENDED GROUND COVER

<u>Suggested Material</u>	<u>Uncompressed Depth</u>
Double Shredded Bark Mulch	9"
Uniform Wood Chips	12"
Fine Gravel	12"
Fine Sand	12"

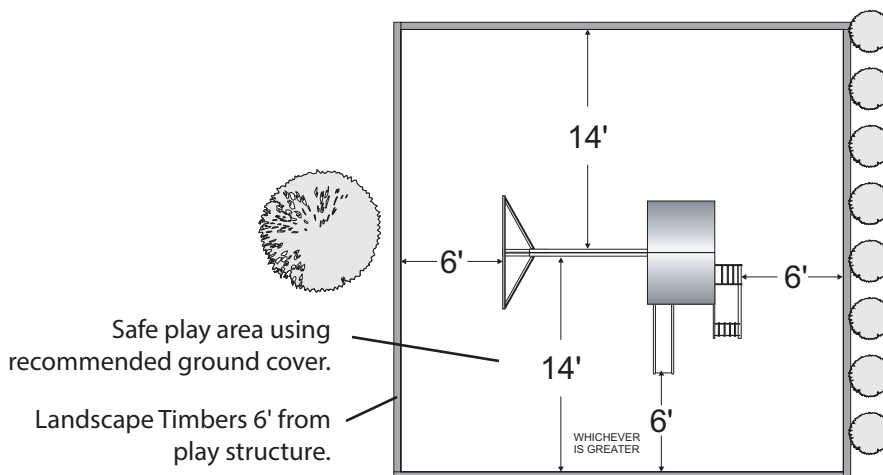


A FALL ONTO A HARD SURFACE COULD RESULT IN SERIOUS INJURY.


HARDWARE BAG CONTENTS

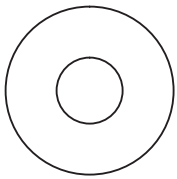


5/16" Flat Washer

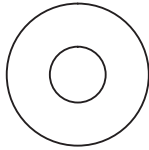


1/4" Flat Washer




5/16" Lock Washer



1/4" Lock Washer




1" Hole Cap



#8 x 1-1/4" Screw




#10 x 1-5/8" Screw




#8 x 2" Screw




#10 x 2" Screw




#10 x 2-1/2" Screw




5/16 x 1-1/2" Hex Bolt




5/16 x 2" Hex Bolt




5/16 x 2-1/2" Hex Bolt



5/16 x 4" Hex Bolt




5/16 x 4-1/2" Hex Bolt




5/16 x 5-1/2" Hex Bolt


Access Ladder Bracket (Not to Scale)

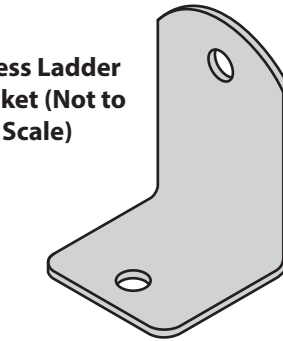


5/16 x 4" Lag Screw



5/16 x 3" Lag Screw



1/4 x 3" Truss Head Bolt



1/4 x 1" Hex Bolt

50334-700 Hardware Bag - SP (2005)

8	17001-104	Weld Nut - 1/4"-20
66	17001-105	Weld Nut - 5/16"-18
4	12002-205	Flat Washer - 1/4"
84	12002-206	Flat Washer - 5/16"
4	12017-205	Lock Washer - 1/4"
66	12017-206	Lock Washer - 5/16"
4	17003-409	Hex Bolt - 1/4 x 1"
4	17003-611	Hex Bolt - 5/16 x 1-1/2"
8	17003-1011	Hex Bolt - 5/16 x 2-1/2"
50	17003-1611	Hex Bolt - 5/16 x 4"
4	17003-2211	Hex Bolt - 5/16 x 5-1/2"
106	17020-115	Screw - #10 x 1-5/8"
90	17020-107	Screw - #10 x 2"
17	17020-107	Screw - #10 x 2"
4	17020-113	Screw - #10 x 2-1/2"
10	17036-1202	Lag Screw - 5/16 x 3"

We have packaged more hardware than is required for assembly.

6	17036-1602	Lag Screw - 5/16 x 4"
4	17119-1209	Truss Head Bolt - 1/4 x 3"
2	14161-400	Access Ladder Bracket

50345-200 Hole Cap Pack

88	15081-704	1" Hole Cap - Brown
----	-----------	---------------------

50348-701 Hardware Bag - Williamsburg Wood Roof

10	17001-105	Weld Nut - 5/16"-18
10	12002-206	Flat Washer - 5/16"
10	12017-206	Lock Washer - 5/16"
6	17003-811	Hex Bolt - 5/16 x 2"
4	17003-1811	Hex Bolt - 5/16 x 4-1/2"

50437-700

Hardware Bag, Ridge Cap

18	17025-104	Screw #8 x 1-1/4"
9	17020-107	Screw #10 x 2"


All hardware on this set is specially coated for corrosion resistance. If non-Creative Playthings hardware is used, it MUST be galvanized or stainless steel.

CREATIVE PLAYTHINGS PLAY SETS USE A FEW STANDARD CONNECTIONS. BECOMING FAMILIAR WITH THESE CONNECTIONS WILL SIMPLIFY ASSEMBLY AND INSURE A SAFER PLAY PRODUCT FOR YOUR CHILDREN.

Hex Bolt & Weld Nut Assembly Procedure:


Assembly Layout:

Align the holes in the parts to be fastened. Start preliminary tightening of bolt into weld nut by hand. Tighten each bolt with a wrench until the lock washer is fully compressed between the head of the bolt and the flat washer. See Illustrations 5 and 6.

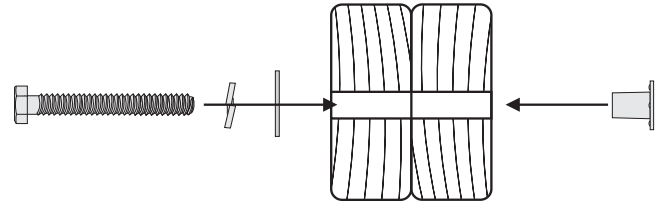

Correct Assembly:


Bolt has been screwed securely into weld nut and the connection is tight. Check connections periodically for tightness during the life of the play set. **Do not over tighten.**

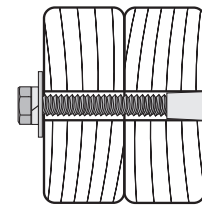

Incorrect Assembly:

During assembly or maintenance the bolt protrudes 1/8" past the weld nut. Call customer service or replace the bolt at a local hardware store. You may be overtightening or using the wrong size bolt.

Failure to replace this bolt with a shorter one could result in serious injury.

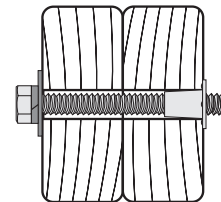


Typical Installation - Lag Screws:

Lag Screw


Flat Washer

- Tap the head of the Lag Screw with a hammer to start the threads into the wood and then use a 9/16" socket to tighten.
- DO NOT over tighten

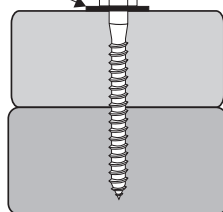


Typical Installation - Wood Screws:

- Use an electric drill or screw gun to drive screws.
- Drill 1/8" pilot holes where required.
- We recommend that you lubricate the threads of the screws with beeswax or soap to ease installation and minimize breaking screws.
- **It is very important to make certain that the tops of all screws are flush with the surface of the wood and there are no protruding sharp edges.**

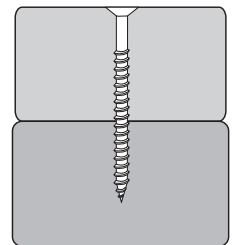

PLAY SET VIEW

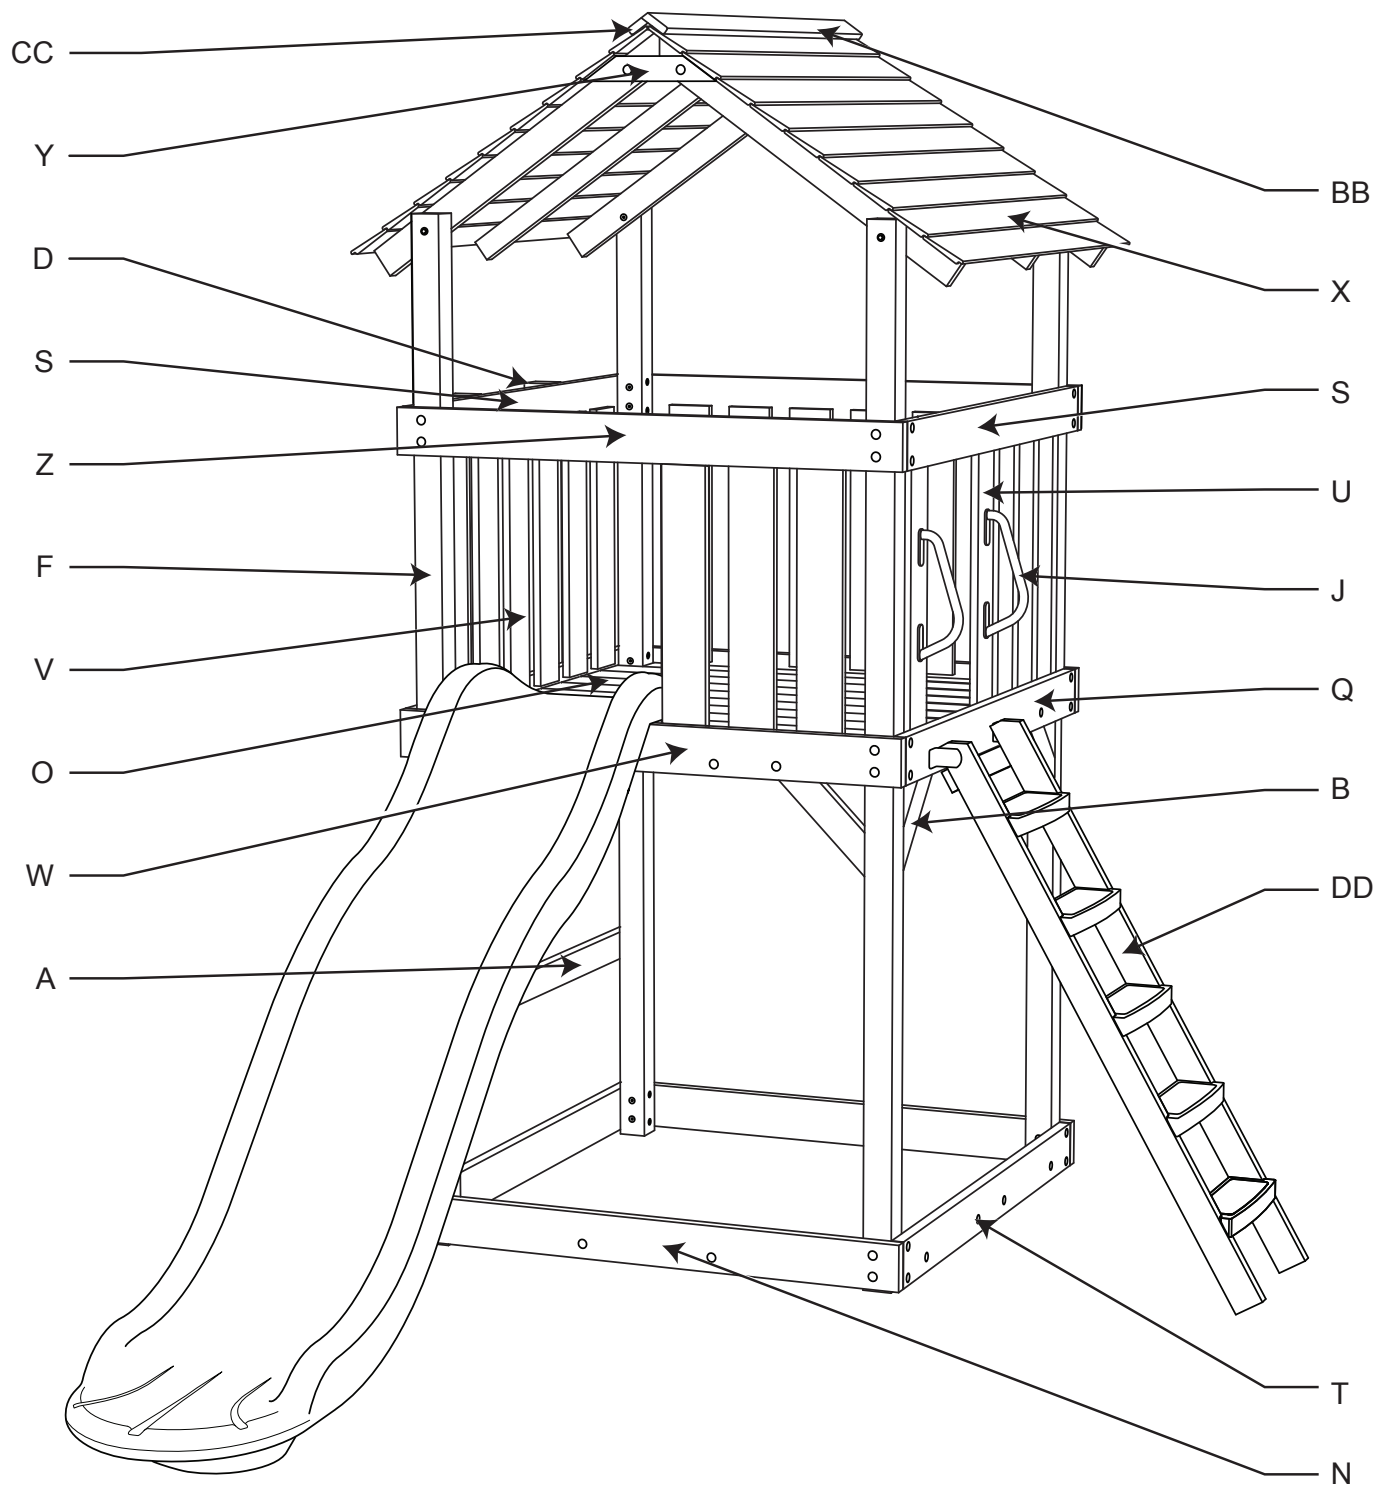

Component Part Identification:

Take inventory of all parts, making sure nothing is missing or defective.

If you find that parts are missing or defective call the Creative Playthings Customer Service Department at 1-800-598-4997.

* Not visible in illustration 9 on Page 6

BOX 1

Box 1 - 63006-421



A 1 ea 31448-102 Safety Rail - 2 x 4 x 59-1/4"



B 8 ea 31682-102 Angle Brace - 2 x 4 x 17-1/4"



F 4 ea 32405-102 Corner Post - 4 x 4 x 116"



G* 2 ea 32420-102 Inside Stringer - 2 x 3 x 59-1/4"



H* 2 ea 32421-102 Outside Stringer - 2 x 3 x 59-1/4"



I* 2 ea 32422-102 Narrow Platform Board - 5/4 x 4 x 49-5/8"



J 2 ea 14179-400 Deluxe Hand Grip, Green



K* 1 ea 40658-102 Slide Mount

L* 1 ea 50334-700 Hardware Bag - SP (2005)

M* 1 ea 50345-200 Hole Cap Pack

BOX 3


Box 3 - 63006-423



U 2 ea 32403-102 Entrance Wall Slat - 5/4 x 6 x 31-1/2"



V 15 ea 32404-102 Wall Slat - 5/4 x 6 x 31-1/2"



W 2 ea 32429-102 Platform End - 2 x 6 x 59-1/4"

If your gym is configured with no accessories that require a wall opening for access, three additional Wall Slats are provided. If additional Slats are not included, contact customer service.



V 3 ea 32404-102 Wall Slat - 5/4 x 6 x 31-1/2"

COMPONENT PARTS

BOX 2

Box 2 - 63006-422



N 2 ea 32416-102 Sandbox End - 2 x 6 x 59-1/4"




O 9 ea 32427-102 Platform Board - 5/4 x 6 x 56-1/8"



Q 2 ea 32424-102 Platform Side - 2 x 6 x 59-1/4"




S 2 ea 32426-102 Side Wall Support - 2 x 6 x 59-1/4"



T 2 ea 32428-102 Sandbox Side - 2 x 6 x 59-1/4"

ROOF BOX

Roof Box - 63006-445

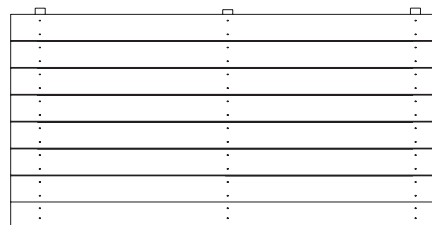

X 2 ea 40529-102 Roof Panel
(Replacement Roof Board: 32805-402)



Y 3 ea 31818-102 Ceiling Joist 2 x 3 x 15"



Z 2 ea 32419-102 End Wall Support - 2 x 6 x 59-1/4"

AA* 1 ea 50348-701 Hardware Bag - Williamsburg Wood Roof




BB 1 ea 32843-402 Ridge Cap Part A - 5/4 x 3-5/32 x 59-1/2"



CC 1 ea 32844-402 Ridge Cap Part B - 5/4 x 2-9/32 x 59-1/2"

ACCESS LADDER

Access Ladder Box - SH946-102

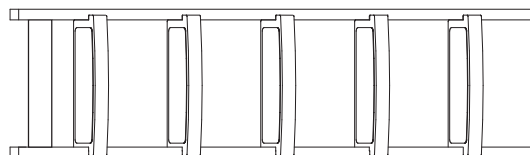

DD 1 ea 40422-102 Access Ladder Assembly

This gym comes standard with no Swing Mounts. One Swing Mount is needed to attach a 7 Ft Beam to the gym. If you have a 7 Ft Beam and the Swing Mounts have not been included, contact customer service.



D 1 31820-102 Swing Mount - 4 x 4 x 39"

MAINTENANCE INSTRUCTIONS

YOUR CREATIVE PLAYTHINGS PLAY SET IS STAINED AT OUR FACTORY. STAINING IS NOT NEEDED AT THE TIME OF INITIAL ASSEMBLY.

Re-staining Information:

- Pigmented, exterior, water repellent stains are recommended and will provide an excellent barrier against moisture without hiding the natural wood grain or leaving a film that may later crack or peel.
- We recommend that you apply stain according to the instructions and precautions recommended by the stain manufacturer.
- It should take three or more quarts to cover your set.
- Contact your local dealer or call Creative Playthings for our staining products.
- All rungs are pre-finished at the factory and do not require any finishing at the time of initial assembly.
- Do not paint, or varnish wooden rungs or steps.
- Avoid using finishes that create slippery surfaces.

Maintenance:

- Wooden playground equipment will last for years with proper maintenance. Maintenance of the play set finish will vary depending on weather climate.
- As a safety precaution, check all hardware for tightness twice a month during use and at the beginning of each play season. Tighten as required and specified in these instructions. Do not over tighten.
- Check structure twice monthly during usage for any evidence of deterioration. If upon inspection, hardware has sharp edges, rusted or structural pieces have signs of premature failure; replace them through Creative Playthings Customer Service.
- Oil all metallic moving parts monthly during the usage season.
- The swings, trapeze, tent, rope ladders, and any other removable plastic accessories should be removed and taken indoors when outside temperatures drop below 32° F (0° C).
- Wood will expand and contract as it adjusts to temperature changes and varying moisture conditions. Checks or cracks are a natural characteristic of all wood and will not affect the strength or durability of the wooden components.
- To maintain the finish of your set, a light sanding and an application of an exterior stain will repair scratches and prevent wood from aging prematurely.
- The wood parts of your play set should never be disposed of by burning.
- Dispose of all parts so as not to create a hazard.

Tools & Materials Suggested for Finishing & Assembly:

- Safety glasses
- Driver drill
- 1/8", 3/16", 5/16" and 3/8" diameter drill bits.
- 1/2" socket driver
- #2 Phillips screw tip
- Carpenters level
- Hammer
- Pliers
- Pencil
- Tape measure
- 7/16" box end wrench or adjustable C-wrench
- Framing square or short level
- Pocket knife
- 6ft step ladder

Maintenance suggested by ASTM Guidelines for Home Play Equipment:

At the beginning of each play season:

- Tighten all hardware.
- Lubricate all metallic moving parts.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- Check metal parts for rust. If found, sand and repaint using a nonlead-based paint meeting the requirements of 16 CFR 1303.
- Check all wood members for deterioration and splinters. Sand down splinters and replace deteriorating wood members.
- Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction maintain appropriate depth. Replace as necessary.

Twice a month during play season:

- Tighten all hardware.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction maintain appropriate depth. Replace as necessary.

Once a month during play season:

- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.

At the end of each play season or when the temperature drops below 32°F:


- Remove plastic swing seats and other items as specified by the manufacturer and take indoors or do not use.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction maintain appropriate depth. Replace as necessary.

Owners shall be responsible for maintaining the legibility of the warning labels.

Pre-Assembly Note: The Williamsburg tower is used in many package configurations. Please see the package guide for your configuration. If your play set will be using a custom layout, there will not be a package guide. In all cases keep your layout in mind while assembling this tower.

STEP 1 — Corner Posts and Weld Nuts:


Place the Posts (F) with large holes at the top, facing up. Align the posts in pairs, one pair will be at the front of the gym and one at the back. Insert 5/16" Weld Nuts into the holes down the upper surface of the posts and the inside surface of each pair except near the middle. Leave out the lower hole of the two near the middle on the inner face.

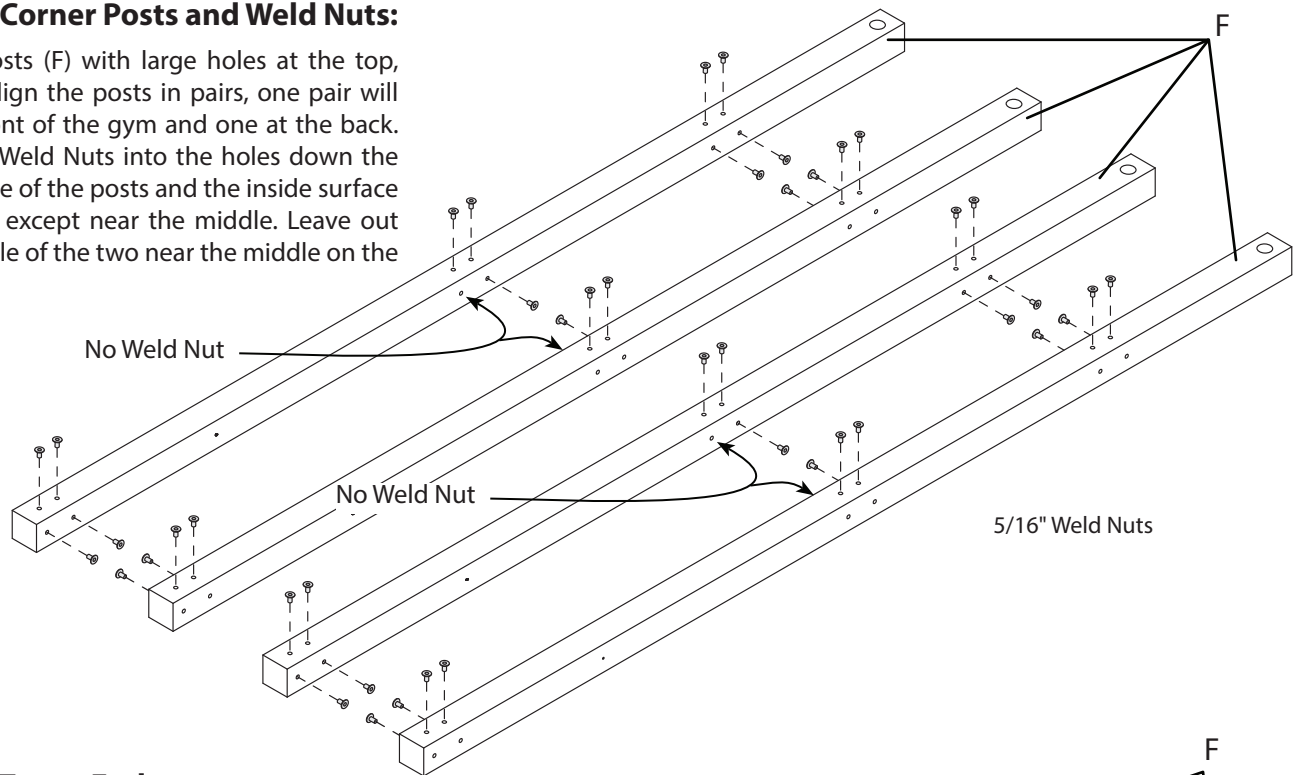

STEP 2 — Tower Ends:

Lay two post on the ground with the bottoms next to the spot you want the tower to stand. Align big holes at the top of the posts face down and the weld nuts on the inside of the pair of posts, facing each other.

Arrange the Sandbox End (N) with the blind holes near the bottom of the posts. Secure The sandbox end to the bottom of the posts using four 5/16 x 4" hex bolt assemblies.*

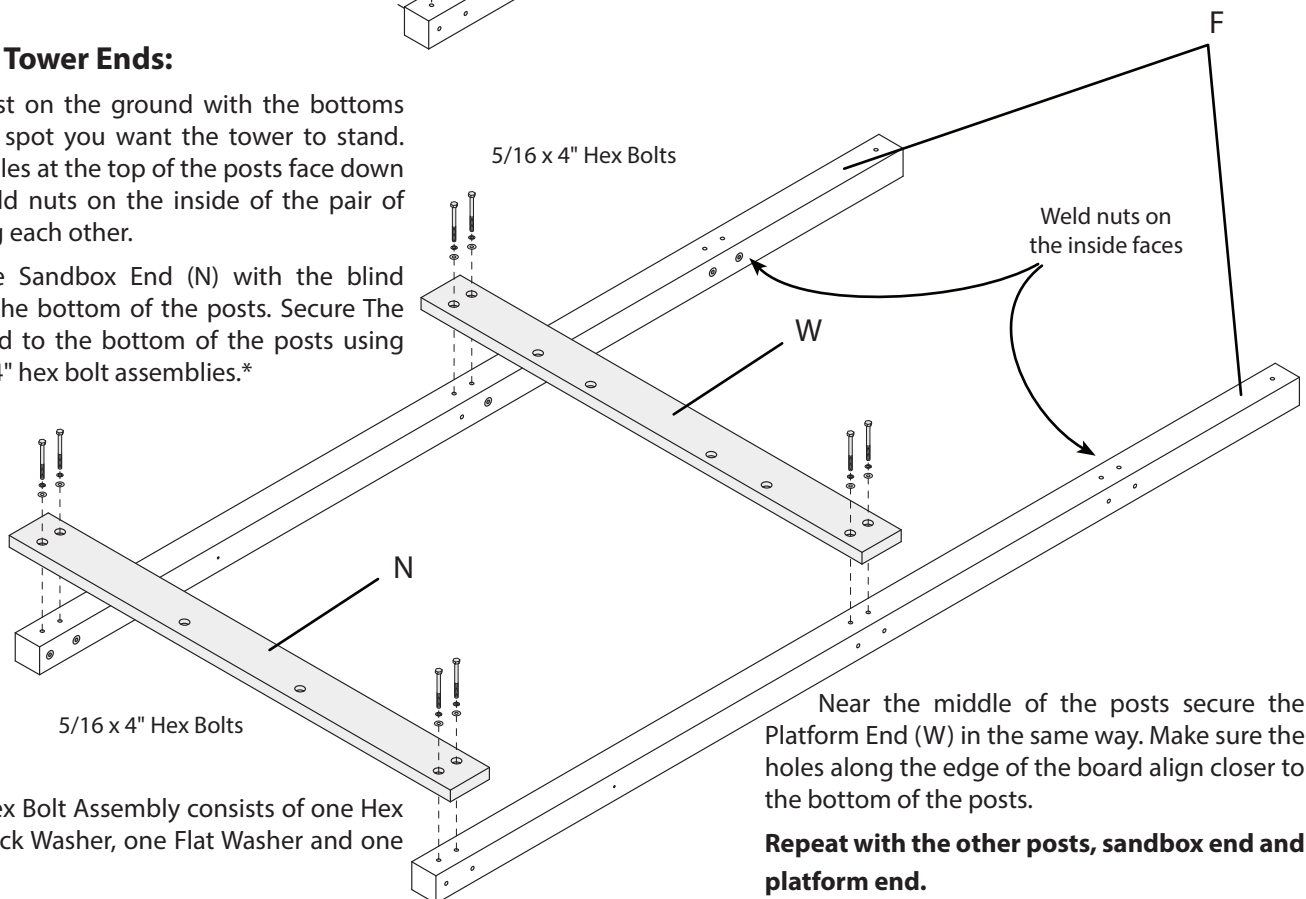

* Note: A Hex Bolt Assembly consists of one Hex Bolt, one Lock Washer, one Flat Washer and one Weld Nut.

Near the middle of the posts secure the Platform End (W) in the same way. Make sure the holes along the edge of the board align closer to the bottom of the posts.

Repeat with the other posts, sandbox end and platform end.

ASSEMBLY INSTRUCTIONS



STEP 3 — First Tower Side:

Raise one tower assembly on edge.

Secure one end of a Sandbox Side (T) to the corner post using two 4" hex bolt assemblies. (Align the blind holes nearest to the bottom of the posts).

Raise one side of the other assembly about 4-1/2 feet from the first and secure the next end of the Sandbox Side to it in the same way.

Move to the middle of the posts and secure one Platform Side (Q) using two 4" hex bolt assemblies, one at each end through the upper hole only! Make sure the holes along the edge of the board align closer to the bottom of the posts.

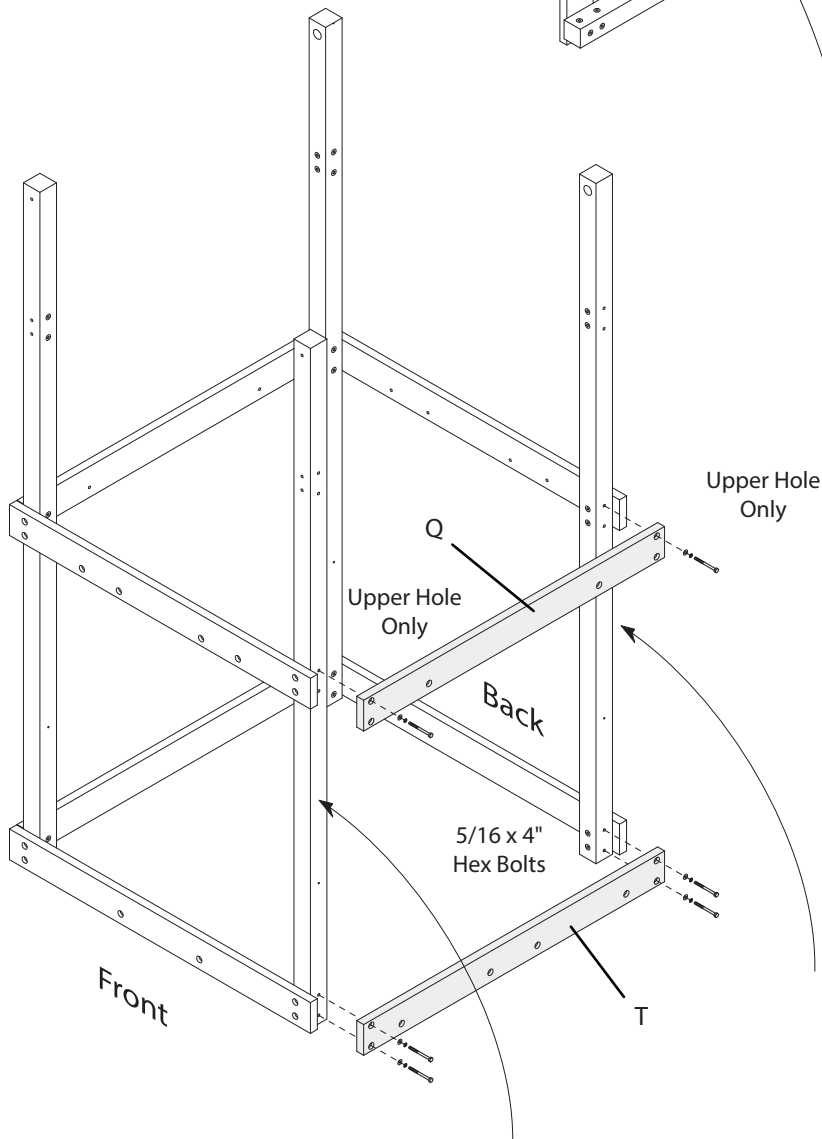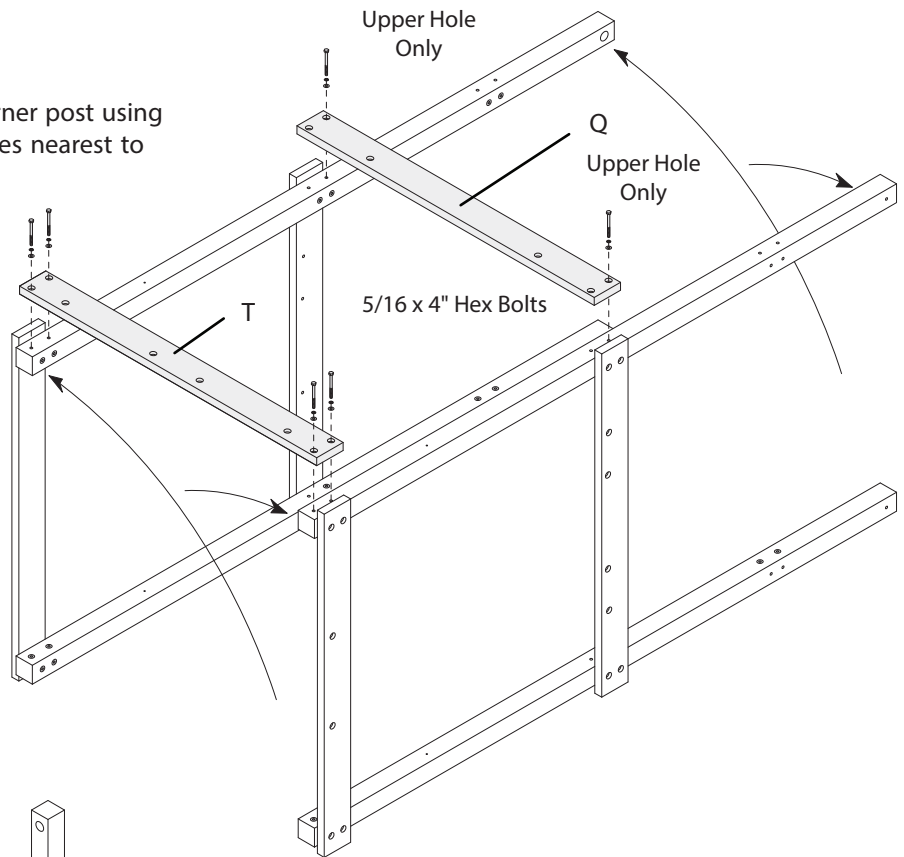

Upper Hole Only

STEP 4 — Raise Tower, Install Ends:

Lift the top of the tower and settle the tower onto its base.

Mount the remaining Platform Side (Q) using two 4" hex bolt assemblies, one at each end through the upper hole only.

Finish the tower base by installing the second Sandbox Side (T) Using four 5/16 x 4" hex bolt assemblies.


Move the tower to the final intended position. Use a Carpenter's level to assure the base is level and the posts are plumb.

STEP 5 — Outside Stringers:

Mount the Outside Stringers (H) to the inside of the left and right corner posts. Attach each outside stringer using two 5/16 x 5-1/2" hex bolt assemblies as shown.


Start the bolt from the outside of the tower. Push each bolt through the bottom hole in the left or right platform sides and the corner posts before passing through the outside stringer. Make sure the platform sides and outside stringers align across the bottom edges.

Hint: The holes in the outside stringers are offset from the center of the board; you may have to flip the board to achieve proper alignment.

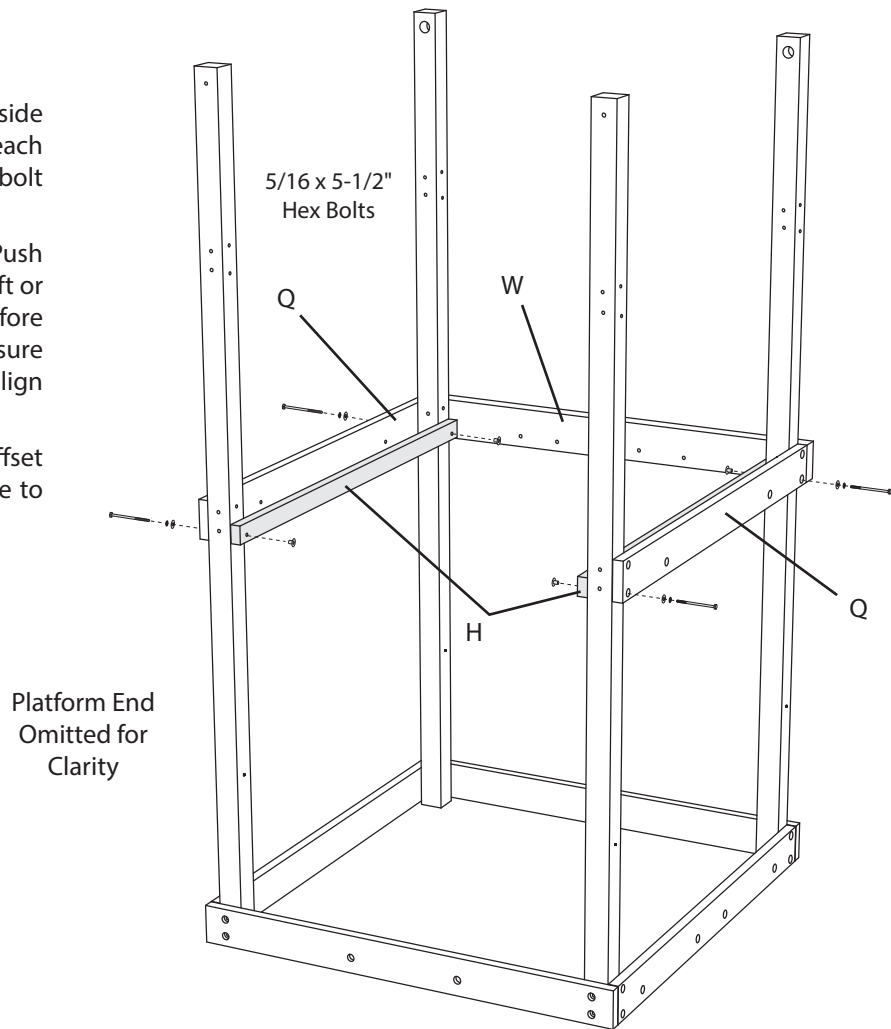

STEP 6 — Inside Stringers

Mount the Inside Stringers (G) between the platform ends. Attach each inside stringer using two 5/16 x 4" lag screws and flat washers as shown. Make sure the outside stringers and inside stringers align across the top edge.

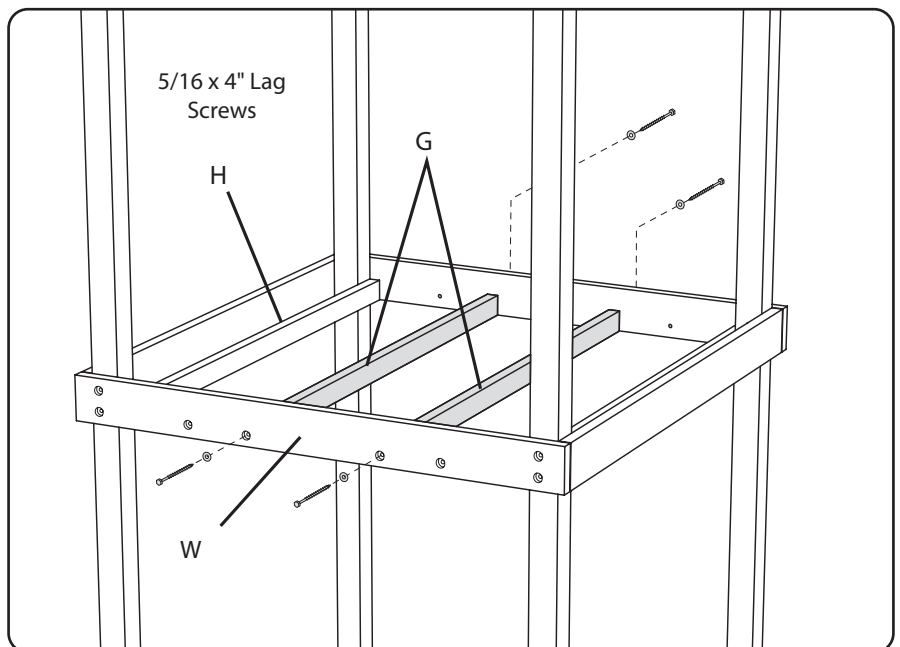


ASSEMBLY INSTRUCTIONS

STEP 7 — Angle Braces:

Fasten an Angle Brace (B) to each end of both platform sides using four 5/16 x 2-1/2" hex bolt assemblies. Do not tighten yet. Fasten each angle brace so the angled end is flat against the nearest corner post.

Fasten an Angle Brace (B) to each end of the platform ends using four 5/16 x 2-1/2" hex bolt assemblies. Do not tighten yet. Align each angle brace so the angled end is flat against the nearest corner post.

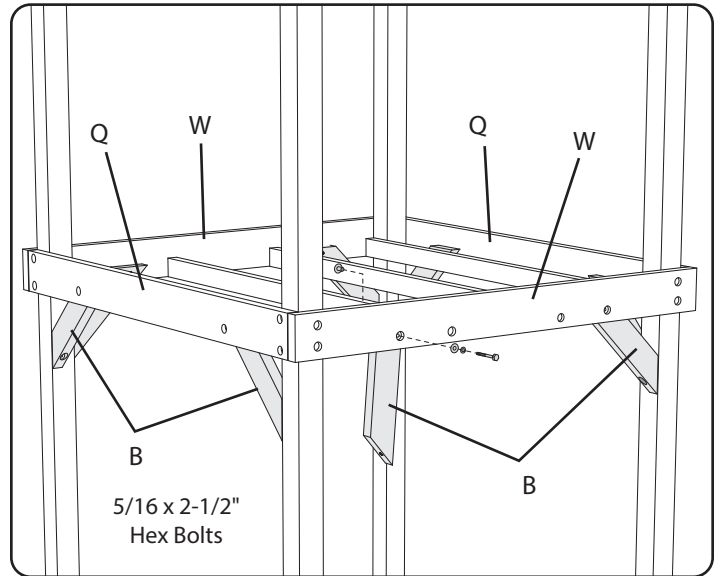


STEP 8 — Angle Braces (continued):

Double check the posts are still plumb.

Tighten all connections except the angle braces. Do not over tighten.


Position all Angle Braces (B) with the angled ends flat against the corner posts nearest to them. With a pencil, mark the position where the holes in the braces rest against the corner posts. At each mark drill a 3/16" diameter pilot hole 2" deep into the posts. Fasten the angle braces to the adjacent posts using one 5/16 x 3" lag screw and flat washer each.

Note: The Stringers have been omitted from the illustration for clarity.

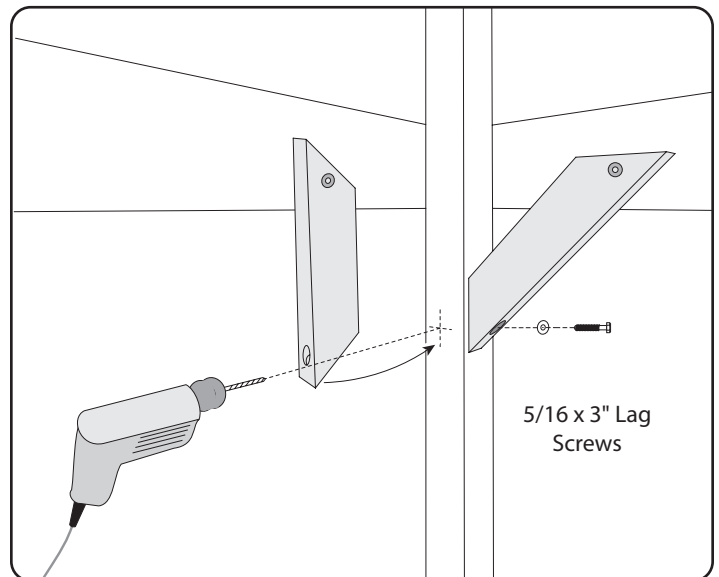

STEP 9 — Narrow Platform Boards:


Place two Narrow Platform Boards (I) tightly against the platform ends on top of the stringers. Fasten the narrow platform boards to the stringers with six #10 x 2" screws on each board.

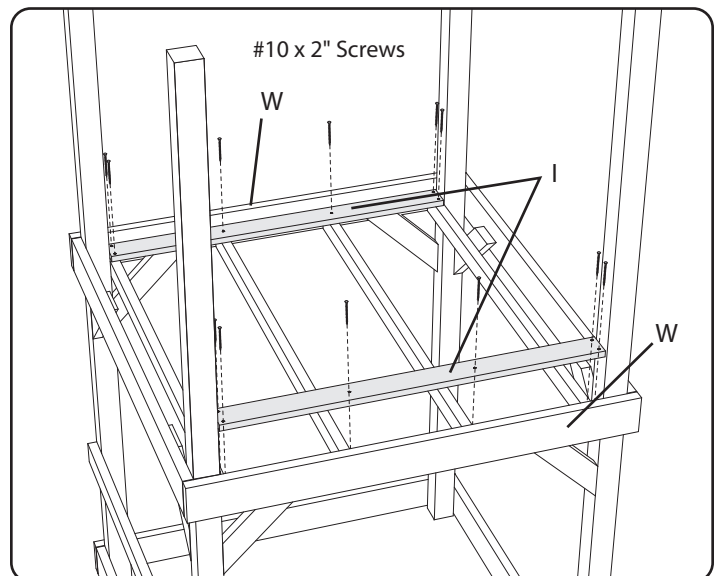

ASSEMBLY INSTRUCTIONS

STEP 10 — Platform Boards:


Layout all nine Platform Boards (O) on the inside and outside stringers. Check each board to make sure the best looking surface faces up. Space the platform boards evenly between the narrow platform boards. Fasten each platform board using six #10 x 2" Screws.

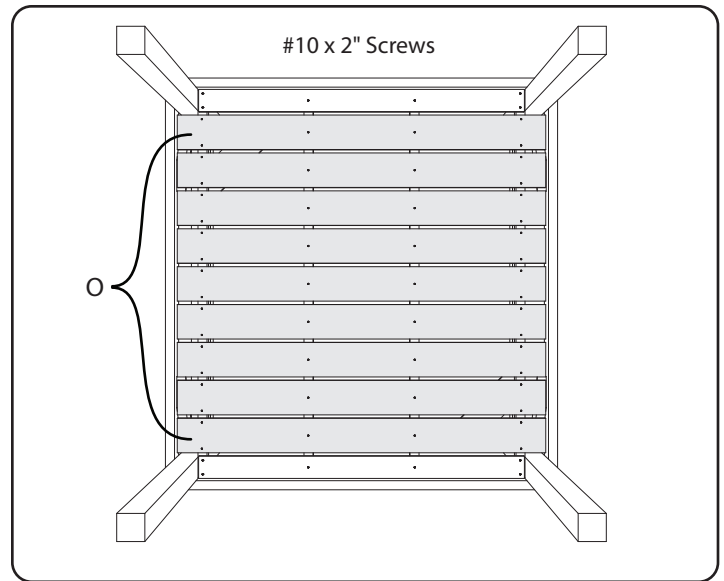

STEP 11 — Left Wall Support:


Fasten one Side Wall Support (S) to the corner posts above a platform side using four 5/16 x 4" Hex bolt assemblies.

Leave off the other wall support for better access lifting the roof into place.

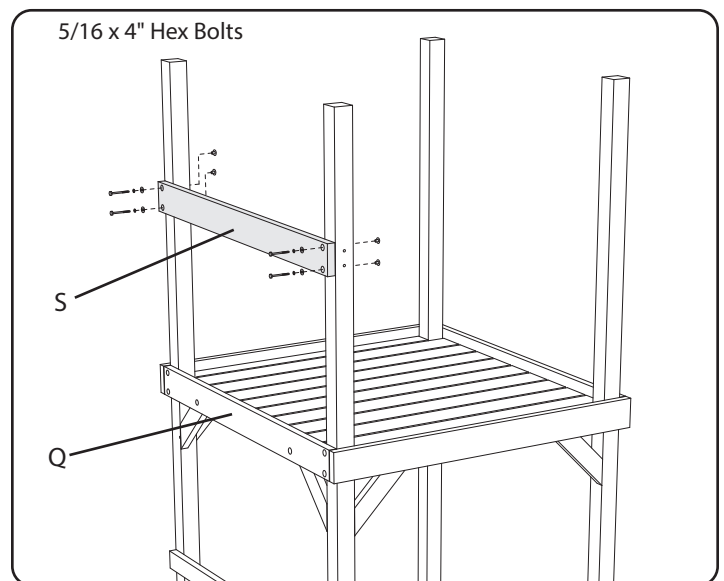

STEP 12 — End Wall Supports:

Fasten the End Wall Supports (Z) to the corner posts above the platform ends using four 5/16 x 4" Hex bolt assemblies for each wall support.

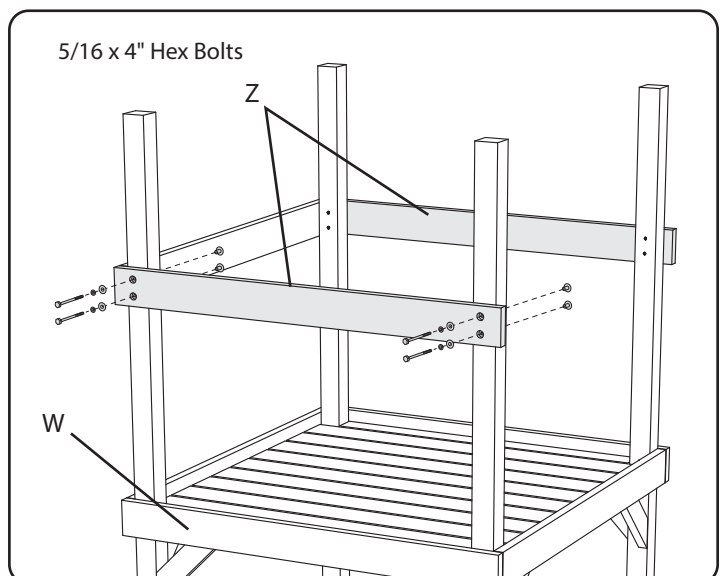

ASSEMBLY INSTRUCTIONS

STEP 13 — Roof:


Note: The hardware to mount the Roof Panels can be found in the Roof Box.

Before lifting the roof panels into place, insert weld nuts into the holes in the outer rafters from the inside of the roof near the end without the angle.

Position a Roof Panel (X) on to the corner posts with the holes at the top of the corner posts, aligned with the holes in the roof rafters. The angled end of the roof rafter should be positioned on the inside of the play set.

Fasten the roof panel to the corner posts with one 5/16 x 4-1/2" hex bolt assembly in each side. Leave the bolts loose enough for the roof to pivot but tight enough to keep it from falling down when working on the next panel.

Repeat with the other roof panel on the other corner posts.


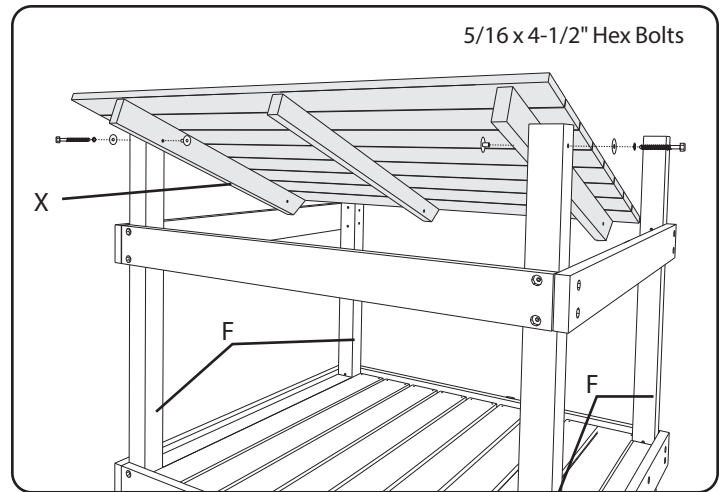


STEP 14 — Ceiling Joist:

Adjust both roof panels until the ends touch and are even with each other. With the counter-bored holes facing out, fasten a Ceiling Joist (Y) to the outside of the roof rafters on each end. Use one 5/16 x 2" hex bolt assembly in each end of each ceiling joist.


Fasten the remaining ceiling joist to the roof rafter in the center of the roof panel. Use a 5/16 x 2" hex bolt assembly in each end of the joist.

Tighten the bolts holding the roof panels to the posts.

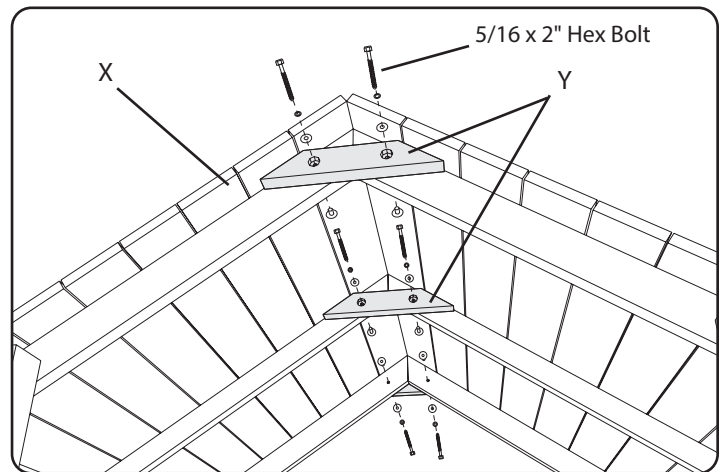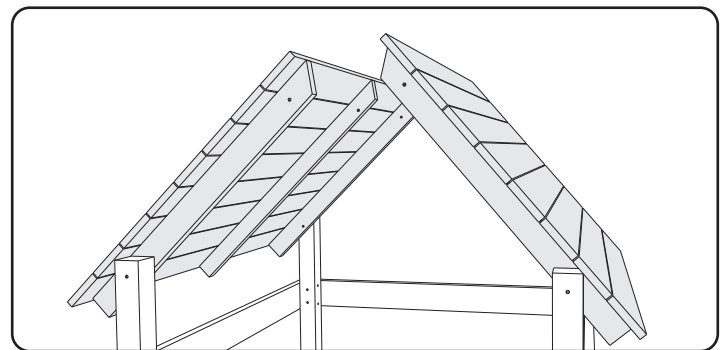

STEP 15 — Assemble Ridge Cap:

Align Ridge Cap Part A (BB) overlapping Ridge Cap Part B (CC) as shown at right. Ensure the ends of the ridge cap parts align before fastening using #8 x 2" screws. Each screw should pass through Ridge Cap Part A and into Ridge Cap Part B. Leave the screw head flush to the surface of Ridge Cap Part A.

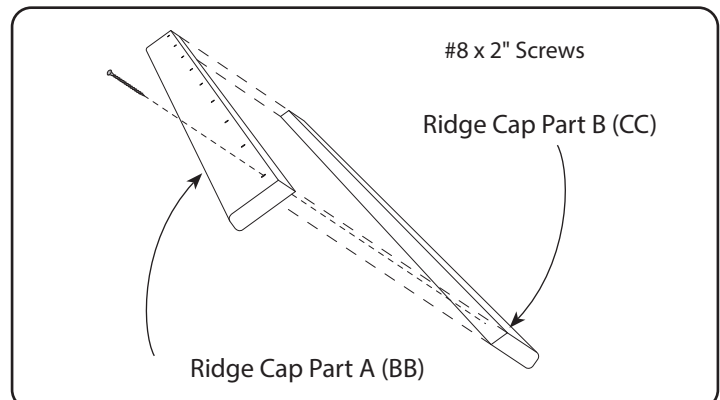


ASSEMBLY INSTRUCTIONS

STEP 16 — Fasten Ridge Cap to Roof:

Before placing the ridge cap, drill a series of 1/8" diameter pilot holes through the top board of each roof panel. The pilot holes should be at least 3" from the end of the roof board and approximately 3/4" from the top edge. Space the pilot holes every 10 to 12 inches.


Put the ridge cap in place at the peak of the roof, as shown. The ends of the Ridge Cap should be flush with the ends of the roof.

From inside the Gym, fasten the Ridge Cap using #8 x 1-1/4" screws, through the pilot holes and into the Ridge Cap.

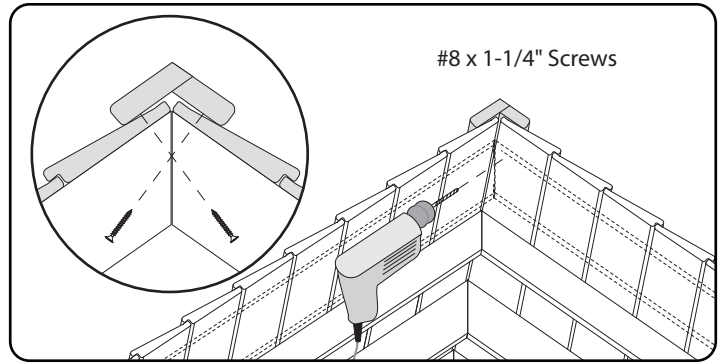

STEP 17 — Right Wall Support:

Fasten the remaining Side Wall Support (S) to the corner posts above the platform side using four 5/16 x 4" hex bolt assemblies.

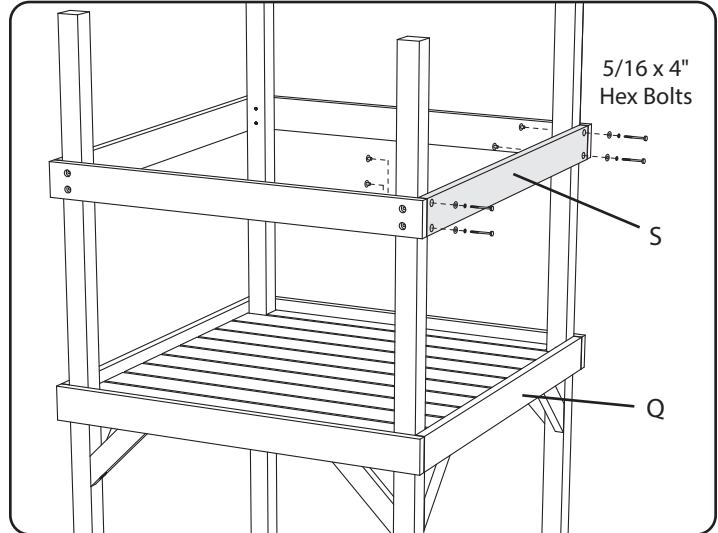

Now the basic tower is assembled, it's time to decide where the accessory play features will mount. Consult the package guide for your specific layout. Install the accessory play features before installing wall slats.

This document continues with the access ladder and slide installation required for almost all packages. Be sure to adapt the placement for your play package.


STEP 18 — Access Ladder:

Loosely fasten two Access Brackets to the Access Ladder (DD) using one 5/16" x 1-1/2" hex bolt assembly each, as shown.

Rest the ladder against the platform side. Make sure the bottom is securely on the ground. The left edge of the access ladder should be 9-1/2" from the end of the platform side.

Check behind the platform support where the brackets rest for interference before drilling. The brackets can be mounted to the inside of the ladder rails if needed. Mark and drill 3/8" diameter holes through the platform side. Fasten each bracket to the platform side using one 5/16 x 1-1/2" hex bolt assembly.

Note: The access ladder can be mounted on any side of the gym, provided that the placement does not interfere with other accessories. The access ladder must be mounted well clear of any swing accessories. Provide space to mount entrance slats and hand grips on either side of the access ladder.

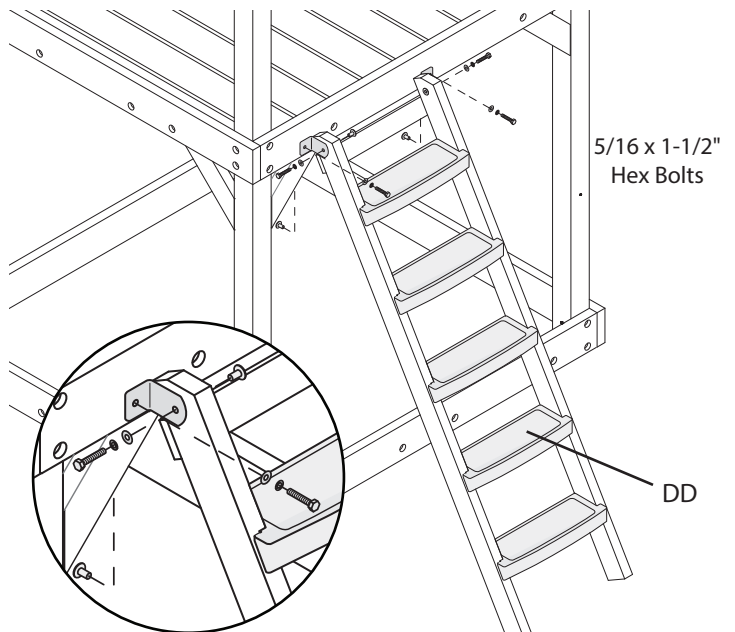


ASSEMBLY INSTRUCTIONS

STEP 20 — Swing Mount:

Swing Mounts (D) can be attached to any side of a gym. One swing mount is used for a 7 Ft Swing Beam. No swing mounts are needed for a 9 Ft Swing Beam.


See the instructions that come with your swing frame for the steps required to install a swing mount.

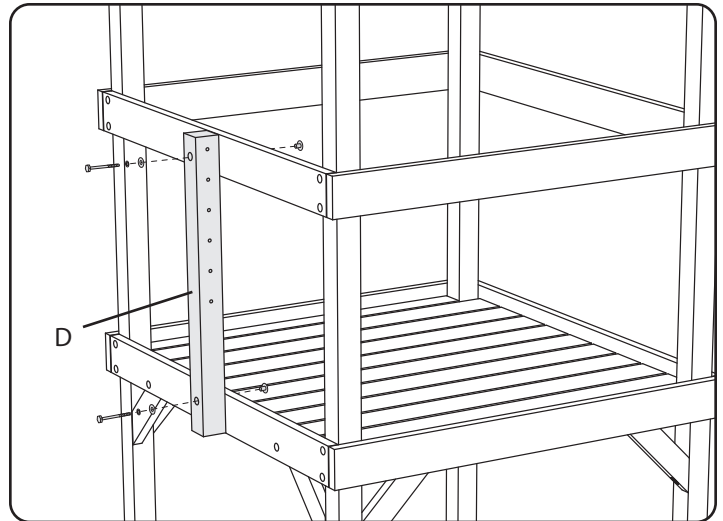

STEP 21 — Safety Rail:

If you are mounting a swing beam to this gym, install the Safety Rail (A) to keep children from walking into the swing area. With no swings, the safety rail is not needed.

Fasten the safety rail to the corner posts on the same side of the tower as the swings using two 5/16 x 3" lag screws with 5/16" flat washers as shown. Use the pre-drilled holes provided.

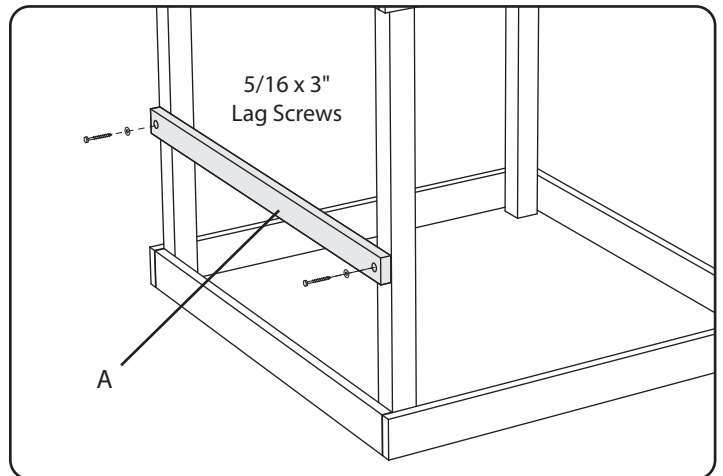

The following steps include instructions for installing wall slats as shown on the cover of this guide. Plan the wall slat positions according to your layout. In general, try to provide passage wider than 15" for any event. The opening for a slide should be 24" or wider.


It is extremely important to never leave a gap of more than 3-1/2" unless that gap is wider than 9". A gap larger than 3-1/2" might allow a child's body to slip through leaving the child's head trapped. A head entrapment can be deadly.

STEP 22 — Front Wall Slats:

Fasten three Wall Slats (V) to the front platform end and the front wall support, as shown. Use four #10 x 1-5/8" screws in each wall slat. Leave approximately 2-3/4" between each slat.

Space the bottom of all wall slats approximately 1/2" above the platform surface.


Hint: Use the Slide Mount (K) to make sure there is enough room for the slide.

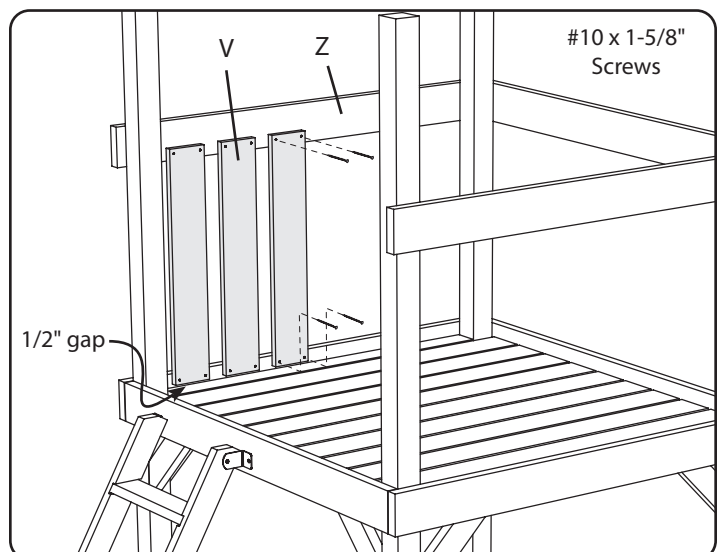

ASSEMBLY INSTRUCTIONS


STEP 23 — Rear Wall Slats:

Fasten six Wall Slats (V) to the rear platform end and the rear end wall support, as shown. Use four #10 x 1-5/8" screws in each wall slat. Leave 2-5/8" between each wall slat.

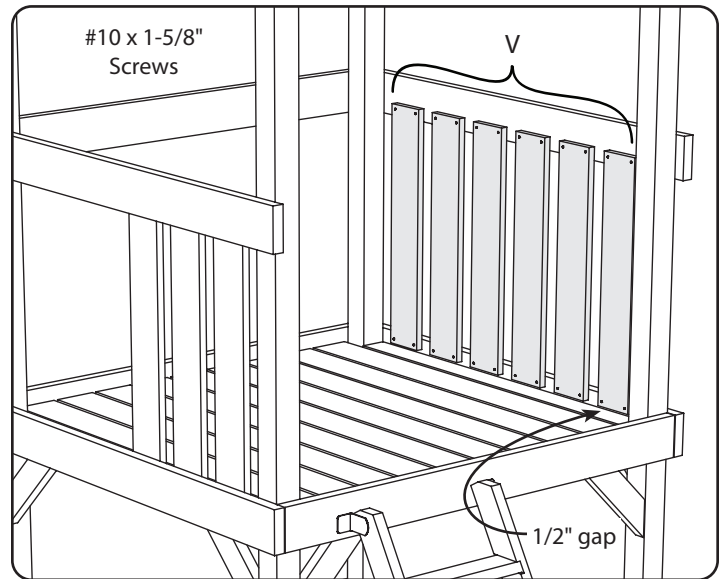

STEP 24 — Left Wall Slats:


Fasten six Wall Slats (V) to the left platform side and the left side wall support, as shown. Use four #10 x 1-5/8" screws in each wall slat. Leave approximately 3-1/8" between each wall slat.

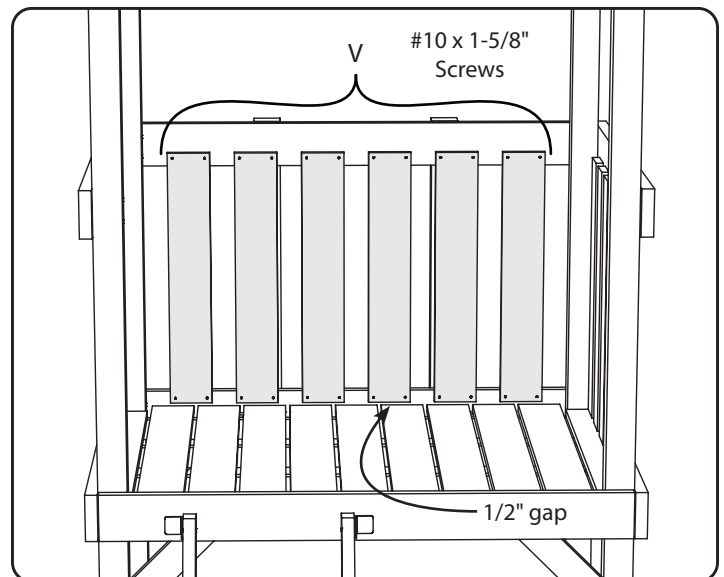

STEP 25 — Right/Entrance Wall Slats:

Find two Entrance Wall Slats (U) and three Wall Slats (V). Place one entrance slat 2" from the front right corner post. Fasten the entrance slat to the inside of the right platform side and right side wall support using four #10 x 1-5/8" screws. Fasten the other entrance slat 17" from the first entrance slat using four #10 x 1-5/8" screws.

Evenly space the three wall slats between the entrance slat and the right rear corner post, as shown. Leave approximately 2". Fasten the Wall Slats using four #10 x 1-5/8" screws.

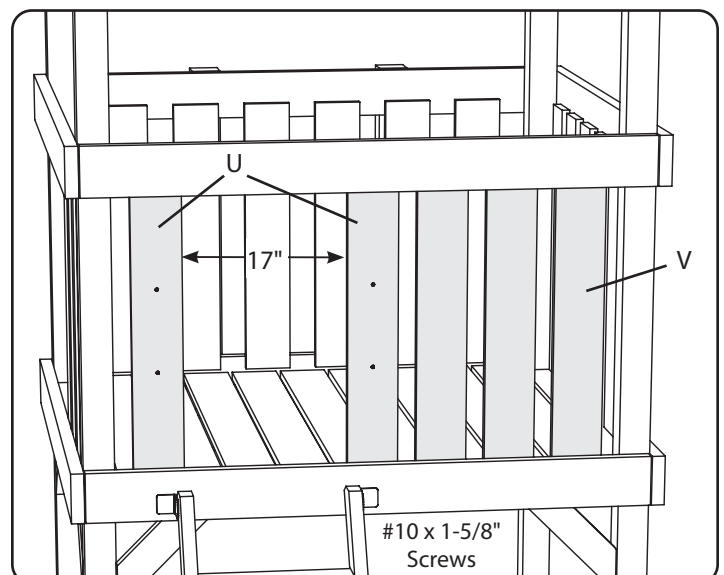


ASSEMBLY INSTRUCTIONS

STEP 26 — Hand Grips:

Fasten the Hand Grips (J) to the entrance wall slats using two 1/4 x 1" hex bolt assemblies each.


The hand grips must be oriented as shown in the illustration, with the big loop at the bottom.

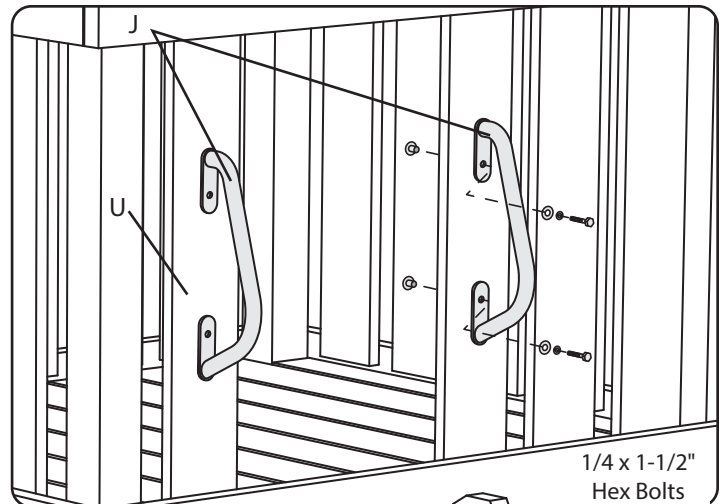

STEP 27 — Slide Mount:

Place the Slide Mount (K) tight against the front platform support, centered on the opening left for the slide. Temporarily put the slide in place to determine whether to use the wide or narrow board closer to the platform support. Secure the Slide Mount to the Platform Boards using four #10 x 2-1/2" Flat Head Wood Screws.

Drive the screws until the heads are flush with the top of the Slide Mount. Do not over-tighten; over-tightening may cause the points of the screws to protrude through the bottom of the Platform Boards.

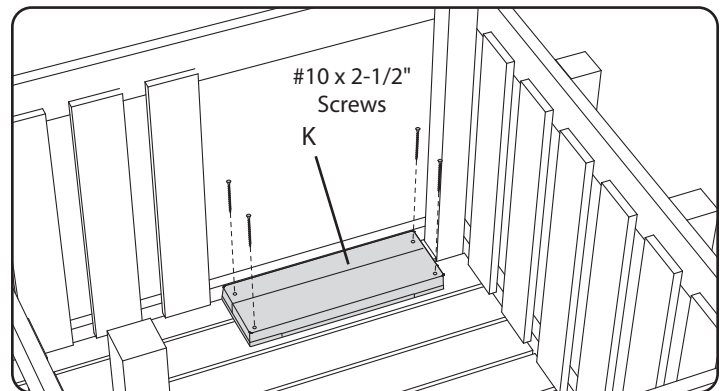


STEP 28 — Slide:

Place the slide in the opening resting on the slide mount, projecting straight out from the tower. Your slide may have stops that indicate placement. If so, pull the slide tight against the platform support. If your slide does not have stops check the underside of the slide to judge how far to overlap the slide mount. Make sure the holes in the slide are over the slide mount.

Make sure the slide extends out perpendicular from the play set.


Drill 5/16" holes through the slide, slide mount and platform Boards using the indents in the slide as a guide. Fasten the slide using one 1/4 x 3" Truss Head Bolt and one 1/4" Weld Nut for each hole.

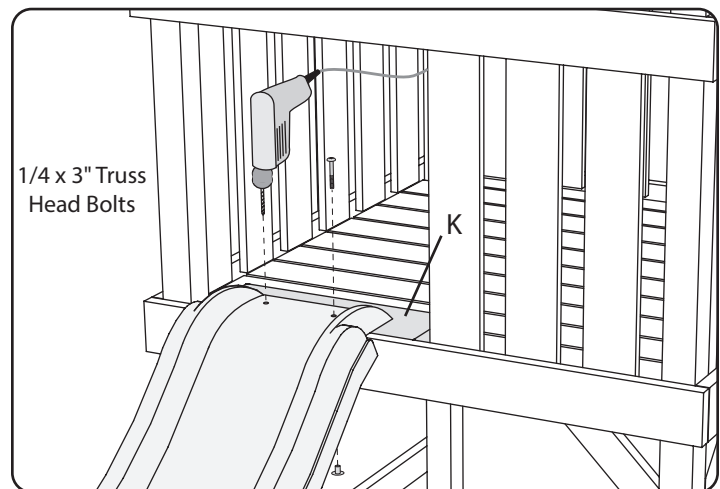

STEP 29 — Hole Caps:

Make a final check to make sure all the bolts and screws have been tightened.

Locate the 1" Hole Caps in the hardware bag. Install hole caps into all the counter-bored holes to cover and protect the hardware.

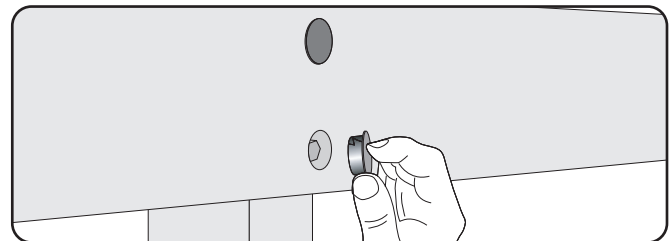

Save all instruction sheets and receipts in case it becomes necessary to contact Creative Playthings for warranty service and/or part replacement. The warranty can be found in your Owner's Manual.